


WIRING DIAGRAM

1 LEF-10C, 1 LEF-5C, 2 LEF-3C, 2 LE-DA, 2 LE-BN, BG-10C

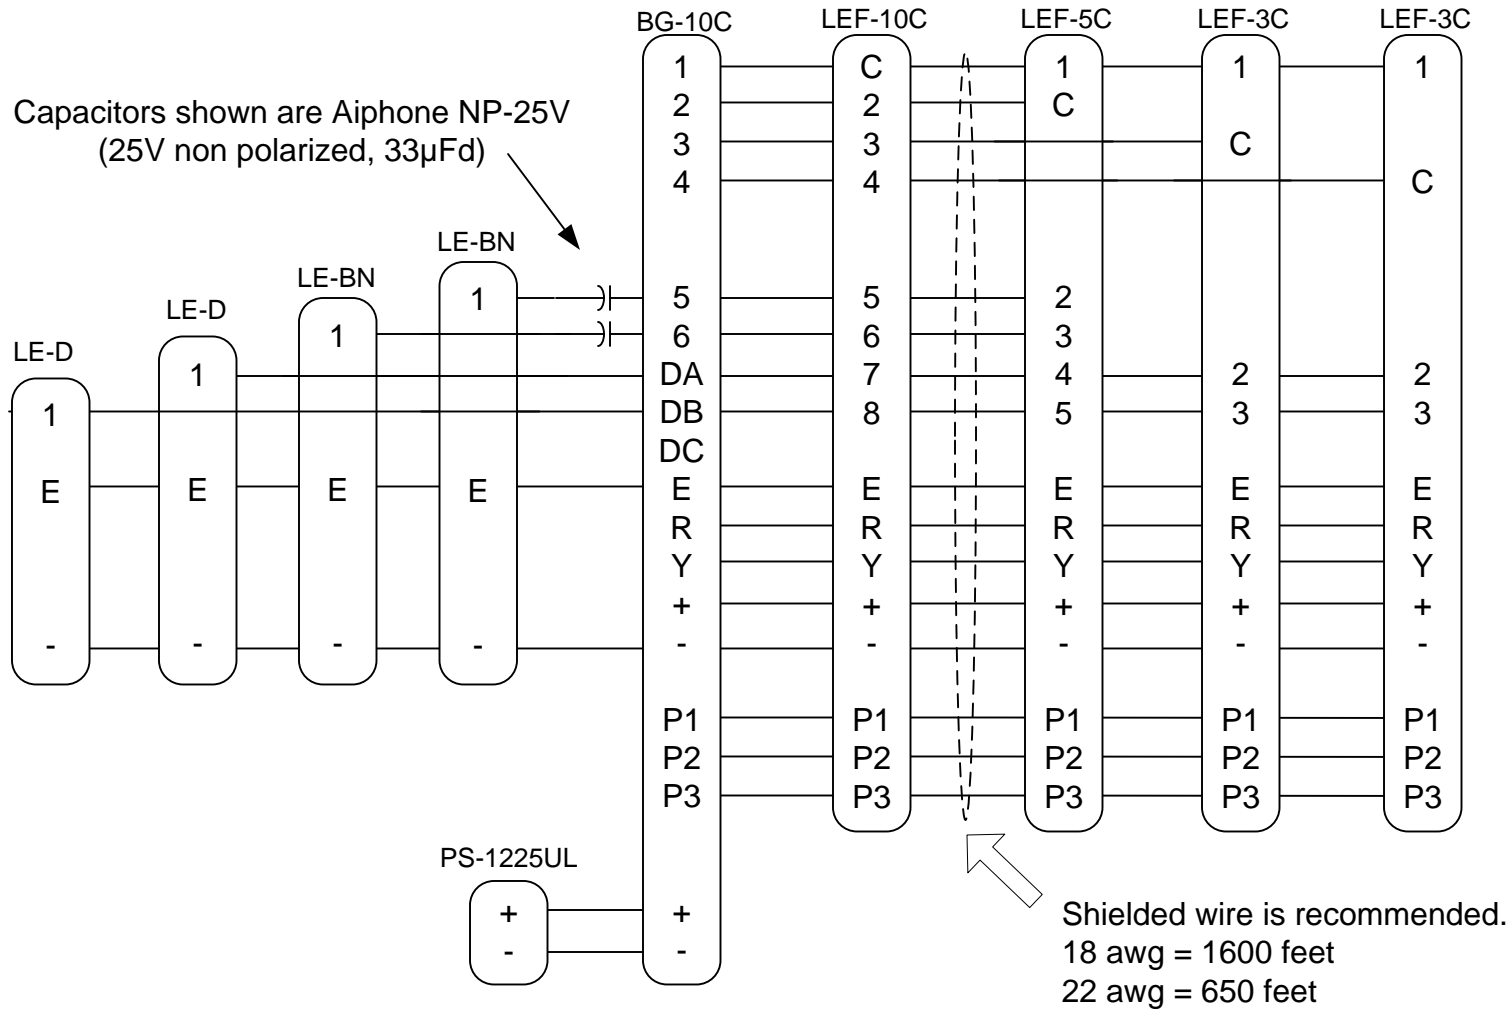

- LEF-10C can call to, talk to, and receive calls from all stations.
- LEF-5C can call to, talk to, and receive calls from the LEF-10C, LE-BNs, and LE-Ds.
- LEF-3Cs can call to, talk to, and receive calls from the LEF-10C and the LE-Ds
- All LEF stations can make and receive all calls.