

NO.	NAME	NO.	NAME	NO.	NAME
40		70			
41		71			
42		72			
43		73			
44		74			
45		75			
46		76			
47		77			
48		78			
49		79			
50		80			
51		81			
52		82			
53		83			
54		84			
55		85			
56		86			
57		87			
58		88			
59		89			
60		90			
61		91			
62		92			
63		93			
64		94			
65		95			
66		96			
67		97			
68		98			
69		99			




**YAZ PHONE TYPE INTERCOM**

Model: **YAZ-90-3W**

**OPERATION & DIRECTORY SHEET**

850742 0204 (A)

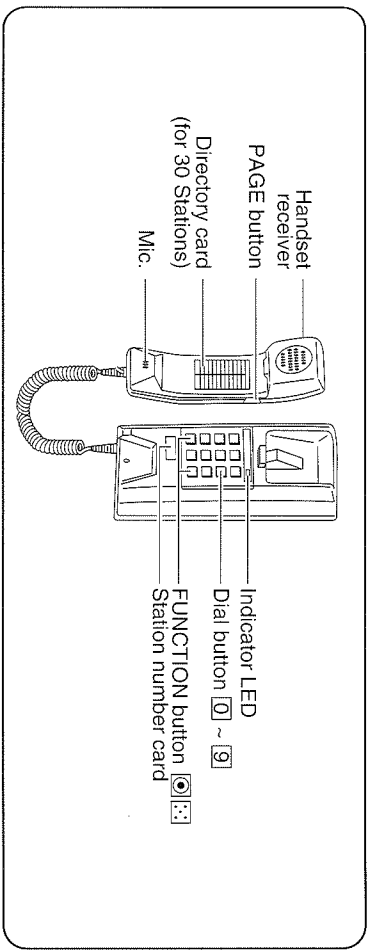

**QUICK REFERENCE**

• **STATION CALL**

by tone 1 [No] [No] 2 The called Station rings.  
by voice 1 [No] [No] 2 [PAGE] button

• **CAMP-ON-BUSY**

1 [0] 2 The called Station rings.  
CLEAR 1 [0] 2 [0]

• **CALL TRANSFER**

Method 1: 1 [0] 2 [No] [No] 3 After answered, hang up handset.  
Method 2: 1 [0] 2 [No] [No] 3 After busy tone heard, hang up handset.

• **CONFERENCE AMONG 3 STATIONS**

To have the third station join conversation, 1 [0] 2 [No] [No] (→Calls for 18 seconds)

• **SECRETARY TRANSFER (Station transfer)**

1 [0] 2 [No] [No]  
CLEAR 1 [0] 2 [0]

• **PAGING (w/YAW-RB)**

1 [0] 2 [No] (0~9) 3 [PAGE] button



## CALLING & COMMUNICATION

### Calling

OPERATION	STATUS OF THE CALLED STATION	ACTION
<p>Pick up handset. Press two dial buttons of station to talk with (Example: [1], [0] for Station #10). Call by voice, holding down PAGE button in handset. After communication, hang up handset.</p>	<p>■■■■ Tremolo tone</p>	<p>➔ Talk as on a telephone after the called station replies.</p>
<p>Pick up handset. Press two dial buttons of station to talk with (Example: [1], [0] for Station #10). Call by voice, holding down PAGE button in handset. After communication, hang up handset.</p>	<p>----- Busy tone The station is communicating with another station</p>	<p>➔ Hang up handset and call later. OR Press [0] button. Camp-on busy is set, and hang up. (The LED flashes to indicate)</p>

### Receiving

Incoming call is annunciated by either tremolo tone or voice. Simply lift handset to reply.

### CALL TRANSFER

When you transfer your call with one station to another;

#### Method 1;

Press [0] button and a Station No. you will transfer the call to.

Hold on until the Station is available. Hang up.

OR

#### Method 2;

Press [0] and the Station No.

Intermittent tone means your transfer is being completed. You may hang up.

### COMMUNICATION AMONG 3 STATIONS

To have the third Station to join your present talking;

1. Press [0] button and the Station Number to ring.
2. Proceed 3-party communication after the third station replies.
3. After the communication, hang up handset.

**Note;** If your call will not be answered within approx. 18 seconds, it returns to initial two-party conversation.

### SECRETARY TRANSFER (Station transfer)

To have any of incoming calls to be transferred and answered by your Secretary Station or any designated Station;

1. Lift handset.
2. Press [0] button and two dial buttons of Secretary station.
3. Hang up handset.
4. Indicator LED starts flashing on your Station.

To clear;

Press [0] and [0] buttons.

### SINGLE-ZONE PAGING (when YAW-RB is used)

1. Lift handset.
2. Press [0] button.
3. Press a dial button (0 to 9) assigned for YAW-RB.
4. Transmit your message while holding down PAGE button.
5. Hang up handset.

### SELF-CHECK OPERATION

1. Pick up handset and dial tone is heard.
2. Press number buttons 0, 1, 3, 7 and 9.  
Your station has been set for self-check mode.  
Busy tone means your operation is void. Try again.
3. Depress and hold down either number button 1, 2 or 3 to check the corresponding talk channel.
4. A continuous tone means your station is operative.  
An intermittent tone means your station is non-operative.