

VMS Integration

Introduction



AC Nio allows direct integration with specific video management systems (VMS).



Hardware - Camera Systems


Navigate to the **Hardware** section in the left-hand menu and select Camera Systems.

This will display all currently configured VMS integrations. Click **Add** in the top right corner to register a VMS to AC Nio.

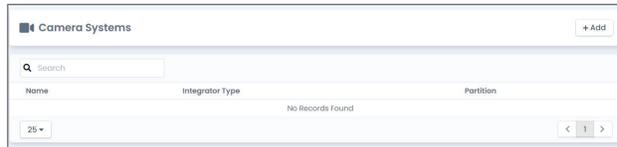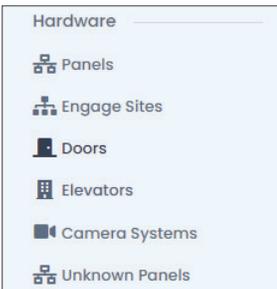


Camera Systems - Camera Integrator

On the Camera Integrator screen, enter a descriptive name for the VMS in the name field, enter the address for the VMS server, as well as the username and password created for that server. Click **Create** button to continue.

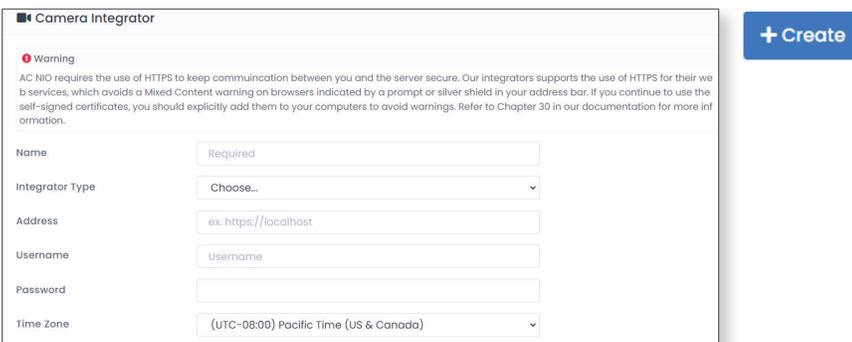


A pop up message will show that the record has been added. Click **Add Configuration** to add another server to AC Nio or click **Continue Configuration** to continue with current configuration.

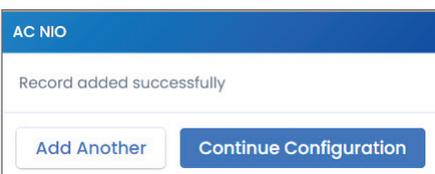




Camera Systems - Cameras

At the top of the next screen, click the drop down labeled **Synchronize Cameras** and select **All Cameras**. Below it will show all cameras residing in the specified VMS. Click the checkbox to enable each camera.

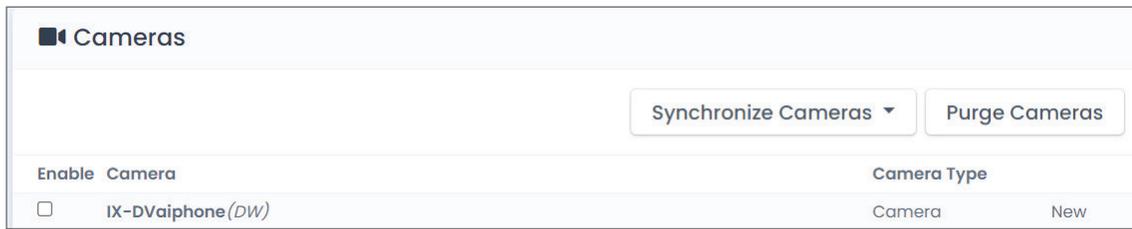

Camera Matrix

In the left-hand menu, scroll to the top and select **Camera Matrix**. Click **Cameras** and select the VMS configuration created in the previous steps. Drag the camera into the square to the right to show the live camera feed.

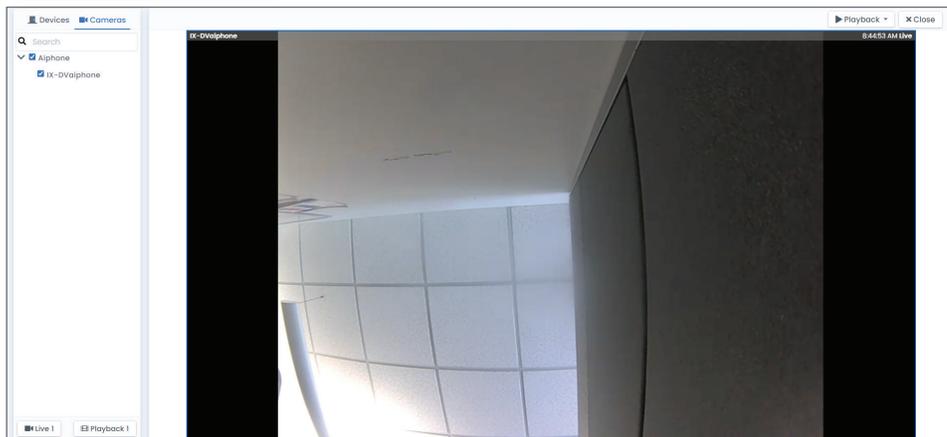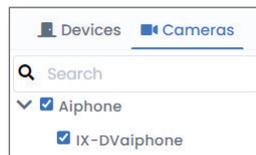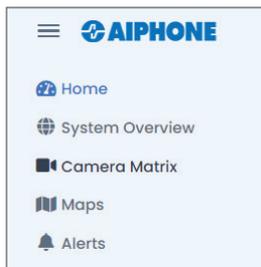

For more details about the features and information above, please contact Technical Support.