

# CHAPTER 4. SUMMARY OF DIALING OPERATIONS AND PRIORITIES

## 1. MASTER STATION OPERATION TABLE

Function	Item	Operation	Remark
Call/response	Call	Dial the station number [X][X] ([X][X][X][X]).	Station No.: 2 – 6 digits
	Response	Either lift the handset or press [PTT].	
	Selective Response	Select the calling station using [REDIAL], then lift the handset. Select the calling station using [REDIAL], then press [PTT].	Telephones cannot be used.
Conversation	PTT (Press-To-Talk)	Press [PTT] to talk.	Telephones cannot be used.
	Conversation	Release [PTT] to listen.	
	Simultaneous Conversation	Either party or both parties lift the handset.	Between master stations
Speed Dialing	Auto Dialing	Press the Auto Dial key ([1] – [8]).	Telephones cannot be used.
	Redial	Press [REDIAL].	
Call Transfer	Call Transfer	Press [XFER] during a conversation. → Other party is placed on hold. Dial the station number to call a third party. → Conversation with the third party. (Call Hold) Either replace the handset or press [C]. → Transfer completed.	Cannot be transferred to a substation. (The Call Hold function remains operational.)
	Call Back	Press [XFER] during a conversation. → Other party is placed on hold. Dial the station number to call a third party. → Conversation with the third party. (Call Hold) Press [XFER] again. → Original conversation is resumed. (Call Back)	
Call Forwarding	Registration at Original Station	Dial [*][6][0][Transferred station No.][#].	Station No.: 2 – 6 digits
	Cancellation at Original Station	Dial [*][6][0][Original station No.][#].	
	Registration at Transferred Station	Dial [*][6][1][Original station No.][#].	
	Cancellation at Transferred Station	Dial [*][6][2][Original station No.][#].	
Time-Based Call Forwarding	Registration	Dial [*][6][3][Transferred station No.][#].	Station No.: 2 – 6 digits
	Cancellation	Dial [*][6][3][Original station No.][#].	
No-Answer Call Forwarding	Registration	Dial [*][6][4][Transferred station No.][#].	Station No.: 2 – 6 digits
	Cancellation	Dial [*][6][4][Original station No.][#].	
Busy Call Forwarding	Registration	Dial [*][6][5][Transferred station No.][#].	Station No.: 2 – 6 digits
	Cancellation	Dial [*][6][5][Original station No.][#].	
Scan Monitor	Start	Dial [*][2].	
	Stop/Re-start	Dial [0] to stop, and [0] again to re-start.	Dial while monitoring
	Scan Forward	Dial [#] to advance substation monitoring.	
	Scan Back	Dial [*] to reverse substation monitoring.	
	Voice Transmission	Press [PTT] to talk.	
	Termination	Either replace the handset or press [C].	
Paging	Zone Paging	Dial [*][8][Zone No.][Zone No.][Zone No.] ... [Zone No.][#]. (Up to 9 zones can be selected.)	[Zone No.]: 1 – 2 digits
	All-Zone Paging	Dial [*][8][0][(0)][#].	
	Emergency Paging	Dial [*][*][*][*].	
	Paging Redial	Dial [*][8][#].	
Outside Line	Call	Dial an outside line access No.	[Access No.]: 0 – 9
	Response	Lift the handset.	
Outside Line Call Forwarding	Registration	Dial [*][6][0][Access No.][#].	[Access No.]: 0 – 9
	Cancellation	Dial [*][6][0][Original station No.][#].	
Time-Based Outside Line Call Forwarding	Registration	Dial [*][6][3][Access No.][#].	[Access No.]: 0 – 9
	Cancellation	Dial [*][6][3][Original station No.][#].	
Outside Line No-Answer Call Forwarding	Registration	Dial [*][6][4][Access No.][#].	[Access No.]: 0 – 9
	Cancellation	Dial [*][6][4][Original station No.][#].	
Outside Line Busy Call Forwarding	Registration	Dial [*][6][5][Access No.][#].	[Access No.]: 0 – 9
	Cancellation	Dial [*][6][5][Original station No.][#].	
Conference	Three-Party Conference	Dial [*][5][Station No.]. → 2-party conversation	Station No.: 2 – 6 digits
		Dial [XFER][Station No.]. → 3-party conversation	
		Dial [XFER][*][5][Station No.] during a two-way conversation. → 3-party conversation	
	Emergency Conference	Dial [#][#][#][#].	4 master stations