

This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (1.6 MB), scan QR code or use link to download it from the manufacturer's website: www.aiphone.com/gt-1c_op-man



Power Source

This tenant station is powered by the system and will always remain on, even when the screen is off. Contact the building manager if the tenant station in this residence is not working.


LCD Screen

Speaker

LCD Screen Brightness Control

Use the dial to adjust the LCD screen brightness levels (0~10).

Microphone

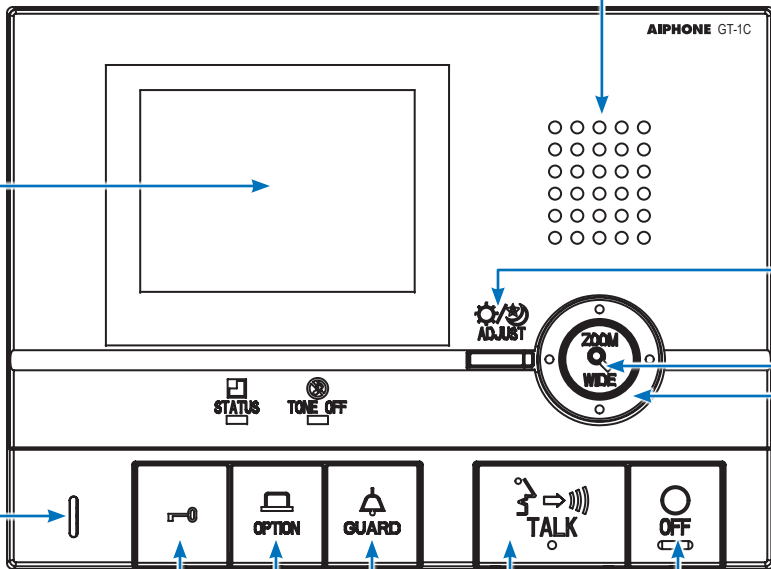

Volume Control

Use the dial to adjust the communication volume (0~10).

Chime Volume Control

Use the dial to adjust the chime volume (0~10). The TONE OFF light blinks slowly when the chime is muted.

Door Release Button

Push the door release button to unlock the entrance during a call.

OFF Button

Push the OFF button to end a call (this does not turn off the station).

ADJUST Button

Push the ADJUST button to compensate for low or bright backlight conditions when viewing video from a door station.

OPTION Button

Push the OPTION button to activate an external device (if included).

TALK Button

Push the TALK button to answer an incoming call. Once answered, conversation becomes hands-free. For push-to-talk (PTT) mode, push the TALK button until a beep is heard. The conversation then requires the TALK button to be pushed and held while talking and released while listening. Whether the conversation is hands-free or PTT, the talk indicator light turns on while you speak and will turn off while your visitor speaks.

ZOOM/WIDE Button

Push the ZOOM/WIDE button to change the screen view or to make a menu selection.

GUARD Button

Push the GUARD button to call all guard and concierge stations connected to the system (if included). To view a visitor on a CCTV camera (if enabled), push the GUARD button while in communication with the entrance station.

Camera/Cursor Control Button

Push Δ , ∇ , \triangleleft , or \triangleright to change the camera view (zoom-view only). When making menu selections, push Δ or ∇ to change the cursor position.