

# This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.7 MB), scan QR code or use link to download it from the manufacturer's website: [www.aiphone.com/gt-2c\\_op-man](http://www.aiphone.com/gt-2c_op-man)



## Operation Buttons

Push the REC/PLAY button to view recorded images. The STATUS light blinks to indicate new recordings.

Push the MONITOR button to see and hear activity in the hallway (personal tenant door station required) or at the main entrance (if enabled).


Push the CALL button to talk between rooms or to call all stations within the apartment (two or more tenant stations required).

Push the MENU button to view settings. When a symbol appears on screen, push the operation button beneath that symbol to activate the function (see chart below).

Symbol	Function
	Manually records
	Return to previous screen
	Play recordings
	Display previous recording
	Display next recording
	Open save/erase options
	Save a recording
	Erase a recording
	Fast-forward recordings
	Pause recordings
	Fast-forward frame by frame
	Reverse frame by frame
	Hide the display symbols
	Monitor entrance (if enabled)
	Communicate room to room
	Select function/setting

## Power Supply

This tenant station has a dedicated power supply and will always remain on, even when the screen is off. Contact the building manager if the tenant station in this residence is not working. If power is lost for over 30 minutes, the blinking STATUS light indicates the date/time needs to be reset.

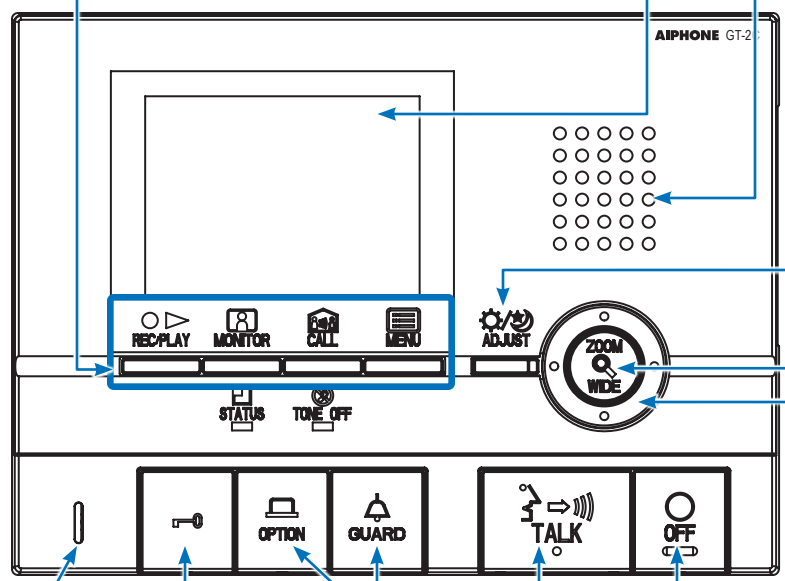

## Mic

## Door Release Button

Push the door release button to unlock the entrance during a call.

## OPTION Button

Push the OPTION button to activate an external device (if included).

## GUARD Button

Push the GUARD button to call all guard and concierge stations connected to the system (if included). To view a visitor on a CCTV camera (if enabled), push the GUARD button while in communication with the entrance station.

## OFF Button

Push the OFF button to end a call (this does not turn off the station).

## TALK Button

Push the TALK button to answer an incoming call. Once answered, conversation becomes hands-free. For push-to-talk (PTT) mode, push the TALK button until a beep is heard. The conversation then requires the TALK button to be pushed and held while talking and released while listening. Whether the conversation is hands-free or PTT, the talk indicator light turns on while you speak and will turn off while your visitor speaks.

## LCD Screen

## Speaker

## LCD Screen Brightness Control

Use the dial to adjust the LCD screen brightness levels (0~10).

## Volume Control

Use the dial to adjust the communication volume (0~10).

## Chime Volume Control

Use the dial to adjust the chime volume (0~10). The TONE OFF light blinks slowly when the chime is muted.

## ADJUST Button

Push the ADJUST button to compensate for low or bright backlight conditions when viewing video from a door station.

## ZOOM/WIDE Button

Push the ZOOM/WIDE button to change the screen view or to make a menu selection.

## Camera/Cursor Control Button

Push  $\Delta$ ,  $\nabla$ ,  $\triangleleft$ , or  $\triangleright$  to change the camera view (zoom-view only). When making menu selections, push  $\Delta$  or  $\nabla$  to change the cursor position.