


IS Unit Supervision by Email

The IS Series network direct and hybrid products can be supervised by enabling an email notification to be sent when the system restarts or when there is a data communication error with any of the units. This email can be sent to 3 different addresses.

Programming Screen

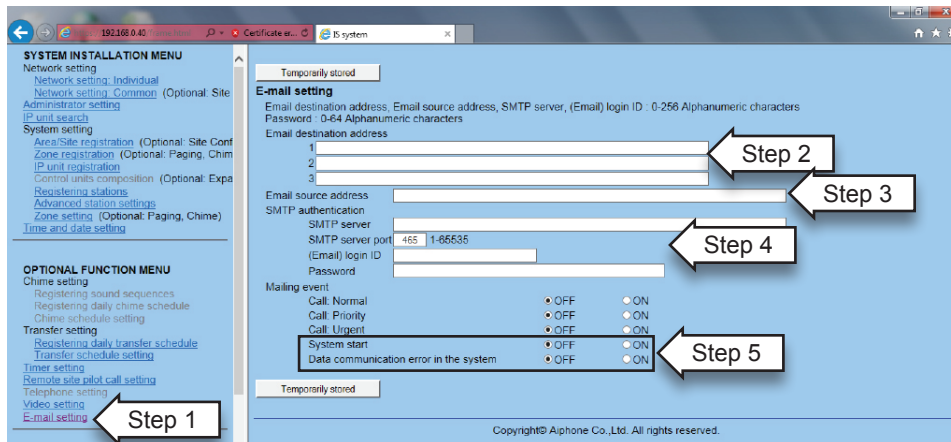

The screenshot shows the 'E-mail setting' screen in the Aiphone IS system programming interface. The left sidebar contains a 'SYSTEM INSTALLATION MENU' with options like Network setting, Administrator setting, and System setting. The main area is titled 'E-mail setting' and includes fields for Email destination address (3 lines), Email source address, SMTP authentication (SMTP server, SMTP server port, (Email) login ID, Password), and Mailing event (Call: Normal, Call: Priority, Call: Urgent, System start, Data communication error in the system). Each field has a 'Temporarily stored' button above it. Five numbered arrows indicate the programming steps: Step 1 points to 'E-mail setting' in the sidebar; Step 2 points to the first line of the Email destination address; Step 3 points to the Email source address; Step 4 points to the SMTP server field; and Step 5 points to the 'System start' and 'Data communication error in the system' radio buttons. The bottom of the screen displays 'Copyright © Aiphone Co., Ltd. All rights reserved.'

Features

Overview

All IS Series network equipment, including the IS-IPC control unit, can be set to send out email notifications. Email notifications are sent when the system restarts and following a data communication error. Data communication error notifications identify non-functioning station(s) by station number, station name, and the associated control unit. IS Series network direct door and master stations will only identify non-functioning station(s) by station number and station name as they have no associated control unit information to report.

Programming

Log into the host device of a functioning IS network system to gain access to the programming window.

- 1) Select **E-mail setting** from the window on the left.
- 2) Enter the **Email destination address**. Up to 3 different email addresses can be used.
- 3) Enter the **Email source address**.
- 4) Enter the **SMTP authentication** information.
- 5) Select the **System start**, and **Data communication error in the system** radio buttons

Click temporarily stored then upload the changes to the system.