


## Displaying Speed Dial Buttons on an IX-MV7-\* Home Screen

### Summary

IX-MV7-\* master stations can be programmed with Speed Dials, which can be used to place calls, unlock doors, and other functions. By default, these Speed Dials are accessed by navigating to the Favorites menu on the IX-MV7-\*. The default home screen can be adjusted so that the Speed Dials are always present.

### Steps

Open **IX Support Tool**. Navigate to **Function Settings**, Display Mode.

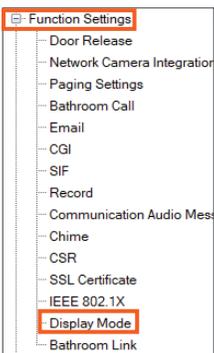


Under **Standard Mode**, Home Screen, click **Option 1** to reveal the drop-down menu. Change the selection to Option 2. Click **Update**.

Station Information					Function Settings			
#	Identification				Display Mode			
	Number	Name	Location	Station Type	Master UI Mode	Standard Mode	Receptionist Mode	
						Home Screen	Color Scheme	Screen Layout
0001	0001	Master Station1		IX-MV7-*	Standard	Option 2	Light	Layout 1



Navigate to **File** and click Upload Settings to Stations. Select the IX-MV7-\* from the Station List and click **Settings**.

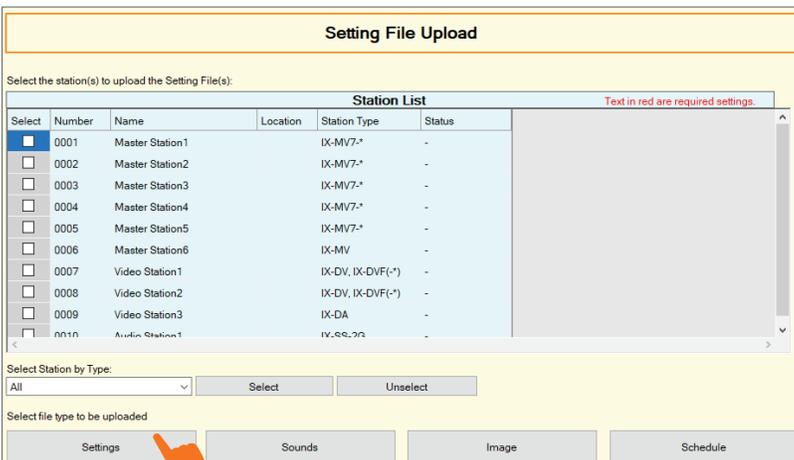

For more details about the features and information above, please contact Technical Support.