

## IX Series Door Station Volume Levels

### Vandal Resistant Stations

Stations from left to right: IX-DV, IX-SSA, IX-DVF, IX-DVF-P, IX-DVF-HW, IX-DVF-L



### Emergency Stations

Stations from left to right: IX-DVF-RA, IX-DVF-RA-FR, IX-SSA-RA, IX-SSA-RA-FR, IX-DVF-2RA, IX-DVF-2RA-FR, IX-SSA-2RA, IX-SSA-2RA-FR



### IX Support Tool Volume Level

### Decibels

Volume Level 1	73dBs
Volume Level 2	76dBs
Volume Level 3	79dBs
Volume Level 4	82dBs
Volume Level 5	85dBs
Volume Level 6	88dBs
Volume Level 7	90dBs
Volume Level 8	92dBs
Volume Level 9	94dBs
Volume Level 10 (default volume)	96dBs (default volume)

Above is a table showing the decibel levels of each IX Series station recorded 30cm away from the speaker on the door station.

#### Note

Door station volume levels are adjustable within the IX Support Tool.

For more details about the features and information above, please contact Technical Support.

Aiphone Corporation | [www.aiphone.com](http://www.aiphone.com) | (800) 692-0200

## Various Stations

Stations from left to right: IX-SS-2G, IX-EA, IX-DVM  
 Not shown: IX-NVP, IX-NVP2



IX Support Tool Volume Level	Decibels
Volume Level 1	59dBs
Volume Level 2	62dBs
Volume Level 3	65dBs
Volume Level 4	68dBs
Volume Level 5	71dBs
Volume Level 6	74dBs
Volume Level 7	76dBs
Volume Level 8	78dBs
Volume Level 9	80dBs
Volume Level 10 (default volume)	82dBs (default volume)

Above is a table showing the decibel levels of each IX Series station recorded 30cm away from the speaker on the door station.

**Note**  
 Door station volume levels are adjustable within the IX Support Tool.