

IX Series - Station Initialization

Getting Started

 
When an IX Series station needs to be switched to a new system, or needs to be defaulted due to programming or configuration errors, it can be initialized using the station's web browser interface. This can be accessed directly when the IP address and station ID and Password is known, or by using Maintenance Mode.

Maintenance Mode

If the IP address and/or ID and Password of a station is not known, Maintenance Mode can be used to access the web browser interface. This mode will temporarily reset the IP address, ID, and Password to the default settings for **60 seconds**. To access this mode, press and hold the Reset button on the station until the Status LED begins to flash (see below for Reset button locations). The default IP Address, ID, and Password are as follows:

IP Address: 192.168.1.160
ID: admin
Password: admin


Note
 Due to the 60 second time limit, it is recommended to have a web browser open with the web address entered and ready before the station is put into Maintenance Mode.

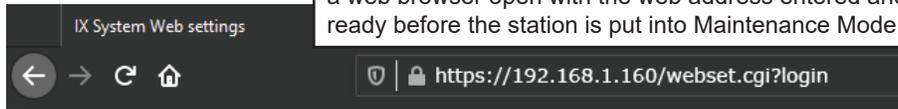

Before placing a station into Maintenance Mode, review the steps outlined on the next page.


Door/Sub Stations

The Reset button is located next to or near the LAN port on the back side.

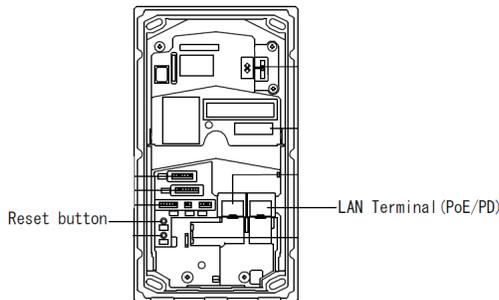


IXW-MA

Remove the front cover to expose the Reset button in the bottom right-hand corner.

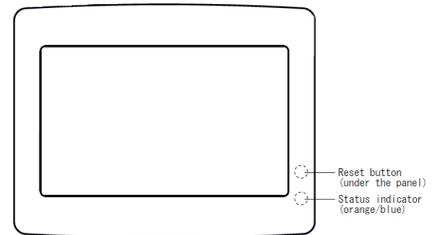


IX-MV7-*

Look for the reset button on the right side of the station near the SD Card slot.

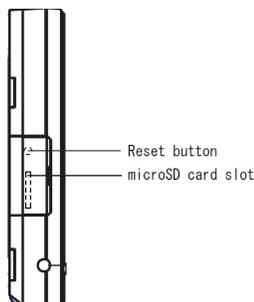

IX-MV

The Reset button is located between the 3rd and 4th speed dial buttons, under the button label panel.

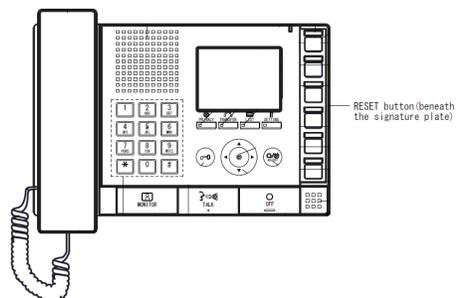


For more details about the features and information above, please contact Technical Support.

Initializing a Station


First, set the PC's IP Address be in the same subnet (IP range) as the station. When using the Maintenance Mode method, this would be "192.168.1.X". Ensure all other network connections (NICs) are disabled at this time, as well.

To access a station's web browser interface, open a web browser and type "https://[IP Address]/webset.cgi?login".

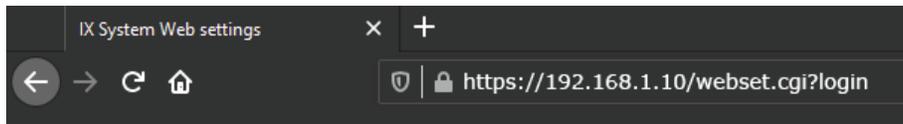


Note
Most web browsers will provide a security warning when initially navigating to an IX station's browser interface. To proceed, click on **More** or **Additional Information** and choose to **Continue** or **Proceed**.

Select the desired **language** and enter the station's ID and Password (*case sensitive*) on the **login screen**.

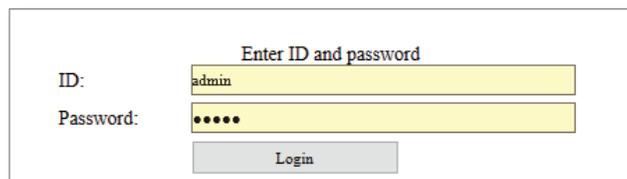

From the left-hand side menu, scroll down and select **Initialization** under **Maintenance**, then click on the **Initialization** button to start the initialization process. This process may take between 1 to 5 minutes. Do not close the browser until it indicates the process has been completed.

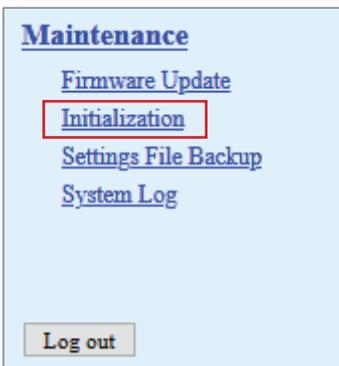

Note
It is possible to open a new browser tab and begin this process for additional stations, except when using Maintenance Mode. In this case, two defaulted stations would have the same IP address, creating an IP conflict and preventing access.

Finishing Up

Once the web interface states the station's initialization has been completed, the station will be returned to its factory settings, but will retain its current version of firmware. Initialized stations can then be associated and uploaded to using IX Support Tool.