

## IX Series

### Tyco® exacqVision™ Integration

**Platform and Version:** exacqVision v21.06 | **Tested Stations:** IX-DA, IX-DVM, IX-DV, IX-DVF | **Compatible Firmware:** Version 6.0 or newer

#### Getting Started

This application note shows the required configuration to add compatible IX Series stations to Tyco® exacqVision™. These steps are meant to be followed after the general configuration of the IX Series stations has been completed. Please refer to the IX Series Quick Start Guide for more information.

#### Support Tool - Configuring ONVIF® and RTSP Credentials

On the left-hand side menu, expand **Station Information** and select **ID and Password**. This screen will allow the addition of an ONVIF®/RTSP ID and ONVIF®/RTSP Password. Both credentials are required for integration with the exacqVision™ client. Special characters may be used when creating an ID and Password with Support Tool Version 8.30 or above.

**Table View**

---

**Station View**

- Station Information
- Identification
- ID and Password**
- Time
- Expanded System

Row Previous Next

Enter Number  Display

Number of Notes: 3

1. Unique password recommended for each station.
2. Set a strong password that is difficult to guess.

Station Information				Station Information								
Identification				ID and Password								
#	Number	Name	Location	Station Type	Administrator ID	Administrator Password	User ID	User Password	ONVIF ID	ONVIF Password	RTSP ID	RTSP Password
0001	0001	Master Station		IX-MV7-*	admin123	*****						
0002	0002	Video Station		IX-DV, IX-DVF(-*)	admin123	*****			aiphone	*****	aiphone	*****

**ONVIF ID and Password**

Enter an ID and Password.

**RTSP ID and Password**

Enter the same ID and Password used for the ONVIF® ID and Password.

Click **Update** to save the changes.

#### Support Tool - Setting File Upload

From the top menu bar, click **File(F)** and select **Upload Settings to Station**.

**Station List**

Select	Number	Name	Location	Station Type	Status
<input checked="" type="checkbox"/>	0001	Master Station		IX-MV7-*	-
<input checked="" type="checkbox"/>	0002	Video Station		IX-DV, IX-DVF(-*)	-

Select Station by Type:

All Select Unselect

**Select Stations**

Use the drop-down menu under **Select Station** by **Type** and chose **All**, then click **Select**.

**Settings**


Click **Settings** to upload the configuration settings to each station.

Select file type to be uploaded

Settings Sounds Schedule

## RTSP Registration

In order to view IX Series stations with the exacqVision client they will need to be added as an **IP Camera** in the server.

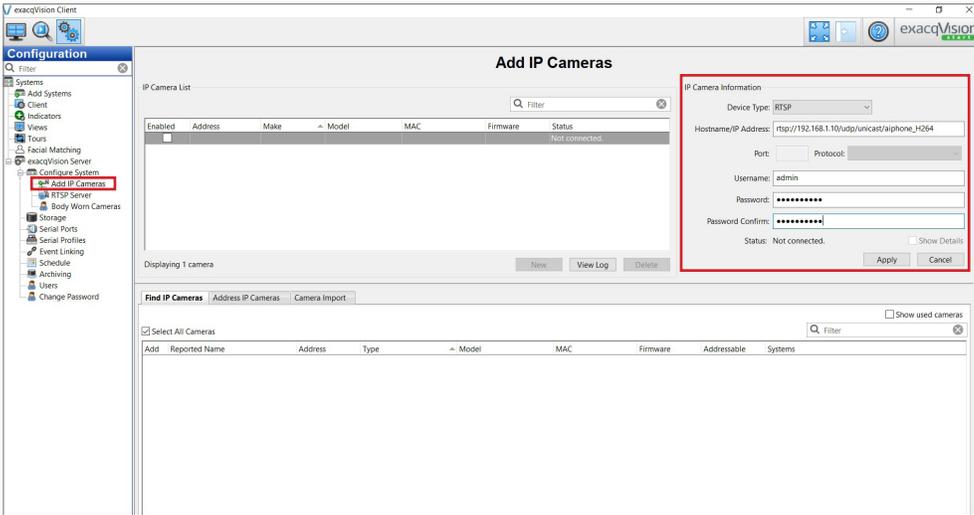

### Add IP Cameras

Expand **Configure System** and click **Add IP Cameras**

### IP Camera Information

Use the Device Type drop-down menu and select **RTSP**. Use one of the following URLs.

rtsp://[ip address]/udp/unicast/aiphone\_H264  
rtsp://[ip address]/udp/unicast/aiphone\_JPEG

### ID/Password

Enter the streaming username and password created previously in the IX Support Tool, click the **Apply** button