

APARTMENT HOUSE INTERCOM w/POSTAL LOCK

MODEL: VCM-OP (Type A)

PROVIDES TIME DELAY REMOTE DOOR OPENING WITH 4 COMMON + 1 SELECTIVE WIRING

VCM-OP

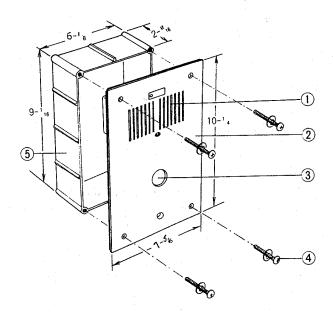

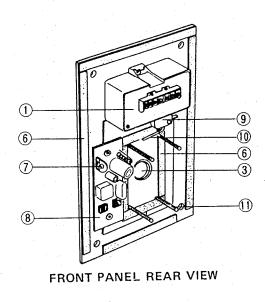


NAMES & FUNCTIONS

- Speaker, mic w/amplifier unit
- 2) Front panel
- Keyhole for postal lock
- 4 Screw (4 pcs)
- (5) Back box
- 6 Weather stripping

- Timer adjustment control
- Circuit for timing cycle
- Microswitch
- Microswitch lever
- Mounting studs for postal lock (4 pcs)

ASSEMBLY INSTRUCTIONS

- 1) PLEASE READ all directions carefully before proceeding to mount postal lock.
- 2) UNSCREW the four ecah holding screws on the front panel of the VCM-OP intercom.
- 3) REMOVE the four screws and lift the VCM-OP intercom front panel from back box.
- 4) TURN the front panel over and observe the mounting studs for placement of postal lock assembly.
- 5) NOTE: Since the postal lock bolt always protudes in the locked position, carefully push the microswitch lever back to allow for fitting of the postal lock assembly.
- 6) POSTAL LOCK assembly will fit snuggly against the weather stripping and the postal lock assembly keyhole will protude through the hole in the front panel.
- 7) CAREFULLY adjust the height of the microswitch to provide correct contact between the postal lock bolt and microswitch lever.
- 8) REMOVE the four each nuts and washers from the assembly pack and secure the postal lock assembly snuggly, but not tightly.
- 9) WIRE the VCM-OP postal intercom unit according to the wiring diagram on backside.

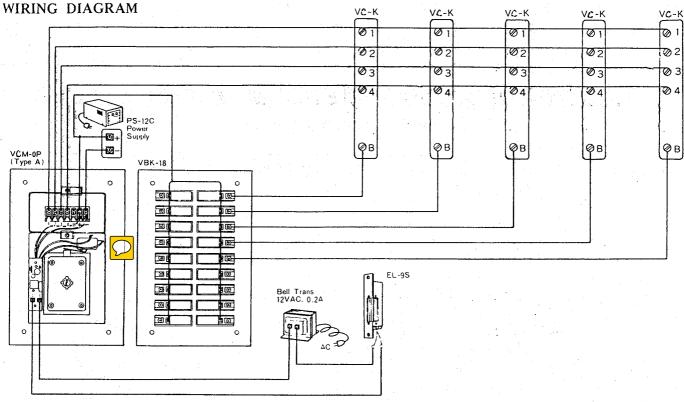


NOTE: Wiring from "L & L" terminals on VCM-OP to AC transformer/EL-9S should be separated from communication cable.

OPERATING INSTRUCTIONS

- 1) THE VCM-OP intercom timer can be adjusted within the range of 6 to 19 seconds.
- 2) ADJUSTMENT of timing cycle is obtained by turning the timer adjust pot to desired position. Turn timer clockwise to decrease timing cycle. Turn timer counter-clockwise to increase timing cycle. NOTE: Midrange setting provides approximately 12 seconds, usually ample time.
- 3) TIMER should be adjusted to allow adequate time for your postman to get from the VCM-OP intercom to the door.
- 4) TO ACTIVATE the timer, the postman will insert his postal key, turn key and remove. The timing cycle begins when key is removed.
- 5) AFTER removing key, the electric door lock (EL-9S) will be engaged, allowing the postman entry through the door.
- 6) THERE is nothing else for the postman to do. Timer will automatically close the door lock.

We are pleased to offer the following warranty:

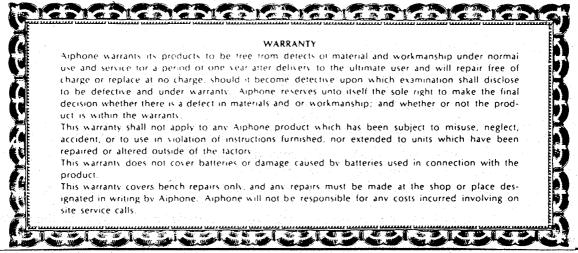

Aiphone Corporation 1700 130th Ave. N.E. Bellevue, WA 98005 (206) 455-0510 FAX: (206) 455-0071 Communication systems for business, home, and industry.