

## Enabling Secondary Door Release for Door Stations on the IXG Mobile App

### Introduction

The IXG Mobile App can be configured to display two different door release sliders. This can be used to unlock separate doors on door stations with two relay outputs. These include models IXG-DM7-HID(A), IX-DV, IX-DVF, IX-SSA, and any door stations based on these models. Extra steps are required to enable the secondary door output on the door station.

### Enabling Second Door Release Slider on IXG Mobile

In IXG Support Tool, navigate to **System Information**, Station List. For each listed Intercom App, set the Select column to have a checkmark, and set Door Release Button to Display 1 and 2, then click **Save**.

- System Information
  - Station List
  - Mobile App List
  - Network Camera List
  - Group
  - Custom Sound Registry

System Information					
0010					
Video Door Station1 / IX-DV,IX-DVF(-*)					
Building Nu	Unit Number	Station Name	Select	Network Camera	Door Release Button
01	002	Intercom App1	✓		<div style="border: 1px solid gray; padding: 2px;">                     Display 1 and 2                 </div> <div style="border: 1px solid gray; padding: 2px; margin-top: 2px;">                     Disable                 </div> <div style="border: 1px solid gray; padding: 2px; margin-top: 2px;">                     Display 1 Only                 </div> <div style="border: 1px solid gray; padding: 2px; margin-top: 2px; background-color: #0056b3; color: white;">                     Display 1 and 2                 </div>

### Enabling Door Release on the Secondary Relay

Navigate to **Option Input / Relay Output Settings**, Relay Output. Use the [Display Settings] menu at the top of the page to switch to Relay Output 2.

- Option Input / Relay Output Settings
  - Option Input
  - Relay Output

[Display settings]

- Relay Output 1
- Relay Output 2
- Relay Output 3
- Relay Output 4
- Relay Output 5
- Relay Output 6
- Relay Output 7
- Relay Output 8
- Relay Output 9
- Relay Output 10
- Relay output 11
- Relay output 12
- Relay output 13
- Relay output 14
- Relay output 15
- Relay output 16
- Relay output 17
- Relay output 18
- Relay output 19
- Relay output 20

## Enabling Door Release on the Secondary Relay (continued)

Use the drop-down under **Function** to set the relay's function to Door Release.

Relay Output 2
Function
No Function
No Function
Status Output
Door Release

Scroll right to the Door Release Key column. Enter any number between 1 and 20 digits. It does not matter which number is chosen. Click **Save**.

Relay Output 2 (Output Time is valid when Relay Output function		
Output Time Range	Output Time	Door Release Ke
3-600 [sec]	5	1234

## Uploading Settings to Stations

Navigate to **Connections**, Upload Settings. Select all stations and click **Settings**.

Connection(S)	App Integration(C)
	Station Search
	Association Settings
	Download Settings
	Upload Settings
	Upload SSL Certificate
	Download Log File
	Station Replacement

### Setting File Upload

Select the station(s) to upload the Setting File(s):  
The Gateway Adaptor will restart when uploading the settings after changing the Maximum Simultaneous Calls. It may take up to 10 minutes to complete.

Station List						Required settings.
Select	Building Nu	Unit Number	Station Name	Station Type	Status	
<input checked="" type="checkbox"/>	01	001	Video Door Station1	IX-DV,IX-DVF(-*)	-	
<input checked="" type="checkbox"/>			Gateway Adaptor1	IXGW-GW	-	


Select Station by Type.  
All

Select file type to be uploaded.

<input type="button" value="Settings"/>	<input type="button" value="Sounds"/>	<input type="button" value="Images"/>	<input type="button" value="Schedules"/>
---	---------------------------------------	---------------------------------------	--

## Uploading Settings to the Cloud Server and Apps


Navigate to **App Integration**, Upload Settings to IXG Cloud Server.

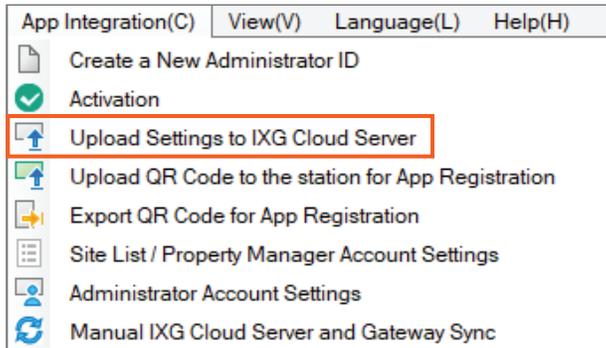

Enter the IXG Cloud Server login credentials and click **Login**.



If there is more than one site under the same account, use the drop-down menu to select the proper site. Once the site is selected, click **Upload**.

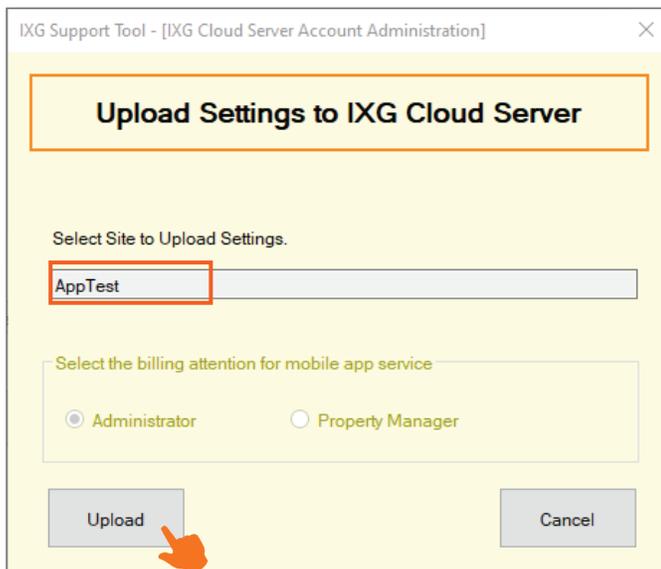

For more details about the features and information above, please contact Technical Support.