
## 3 LEF-10S, 3 LE-A with All Call

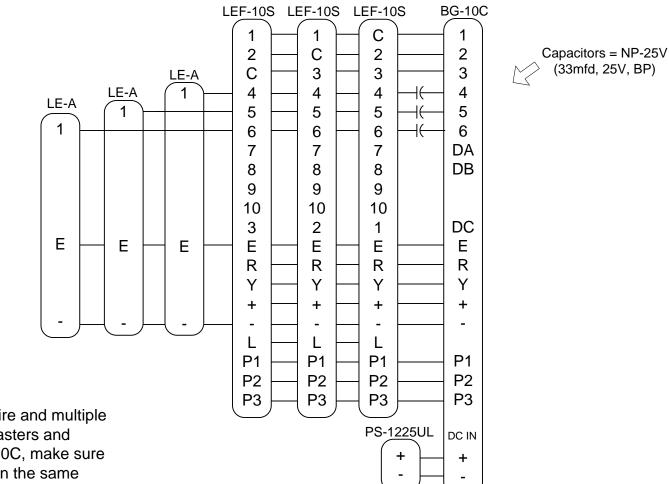

When using a 10 conductor wire and multiple 2 conductor wires between masters and between the master and BG-10C, make sure the # terminal wires (1-6) are in the same jacketed cable as the E terminal wire.

P1, P2, and P3 wires should also be in the same cable if possible, either that or in their own cable entirely (P3 acts as the E wire in that case).