



WIRING DIAGRAM

N-20AS to NEM master

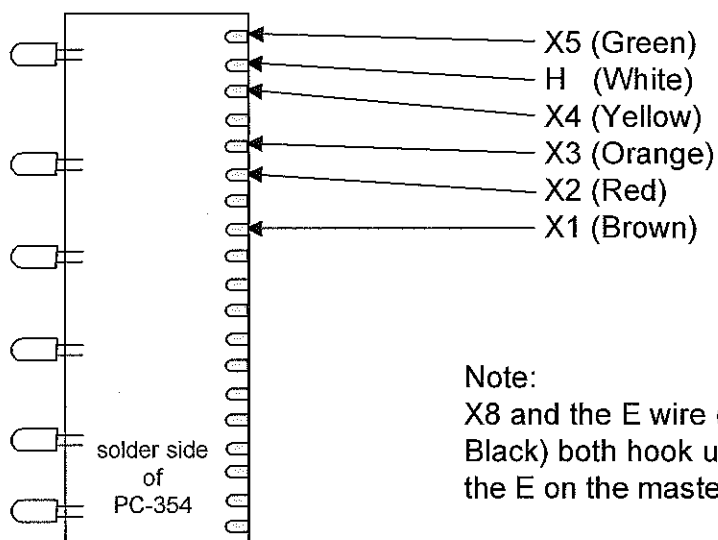

Note:
X8 and the E wire (Gray / Black) both hook up to the E on the master

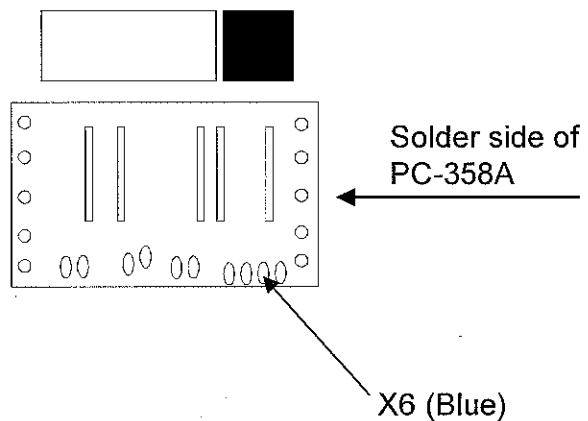

X7 solders to capacitor C1, with existing red wire (side away from relays)

