


IX Series

Connecting a Door Station to an External Speaker/Amplifier

The IX Series door stations (IX-DA, IX-BA) provide a 600Ω audio output that can be tied to an external amplifier or powered speaker with a 600Ω input. This output can be used for paging only or during paging and 2-way communications.

Wiring

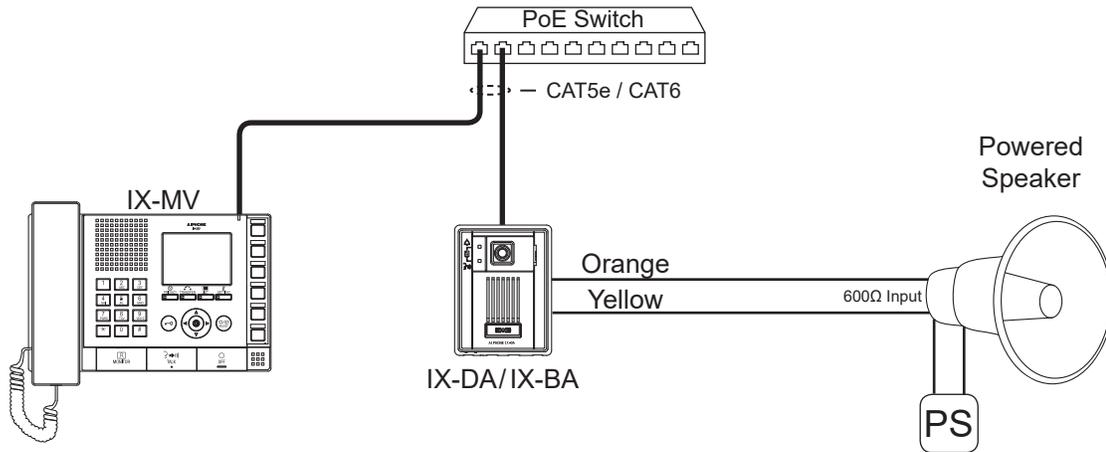

Programming

The audio output must be enabled to function. This can be done using the IX Support Tool or by logging into the door station using a web browser. This guide will show the process using the IX Support Tool.

Open the IX Support Tool and select the system to be modified.

Expand the ① **Function Settings** tree from the menu on the left and select ② **Paging Output Settings**.

③ Use the drop down beside the door station to select when to use the audio output.

- **Built-in Speaker for communications and paging** (default) : Audio output will not be used.
- **Audio Output for communication and paging** : Audio output will be used for all communications.
- **Built-in speaker for communication, Audio Output for paging** : Audio output will be used when station is paged.

Click the **Update** button to save changes.

- ① Function Settings
 - Door Release Settings
 - Contact Input Call
 - Paging Settings
 - ② Paging Output Setting
 - Network Camera Integration
 - E-mail Settings
 - CGI Integration
 - SIF Integration

#	Station Information				Function Settings
	Number	Name	Location	Type	Paging Output Setting
001	100	Office		Master Station	Paging Audio Output (same as Contact / Audio Output Settings)
002	200	Scale		Video Door Station	Paging Audio Output (same as Contact / Audio Output Settings)
					Built-in Speaker for communication and paging ③
					Built-in Speaker for communication and paging
					Audio Output for communication and paging
					Built-in Speaker for communication, Audio Output for paging

Click ④ **File** then ⑤ **Upload Settings to Station**. ⑥ Check the box beside the door station(s) that was edited, then click **Start Upload**. Check the Status column for success/failure of settings upload.

- ④ File(F) Edit(E) Language(V) Tools(T)
 - Create New System
 - Select Existing System
 - Save Settings
 - Download Settings From Station
 - Upload Settings To Station ⑤
 - Import Setting File
 - Exit

Station List					
Select	Number	Name	Location	Type	Status
<input type="checkbox"/>	100	Office		Master Station	-
⑥ <input checked="" type="checkbox"/>	200	Scale		Video Door Station	-

For more details about the features and information above, please contact Technical Support.