



PRODUCT DRAWING

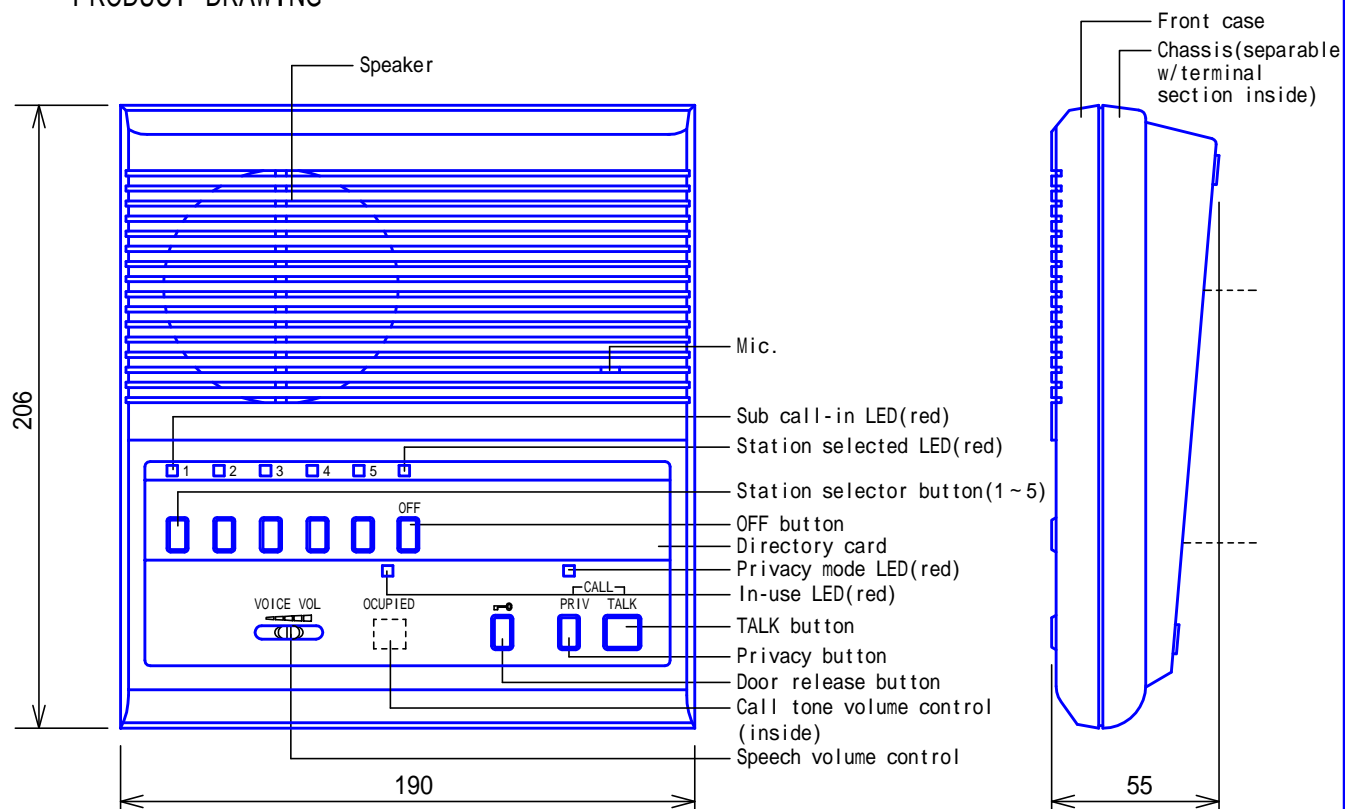

MOUNTING

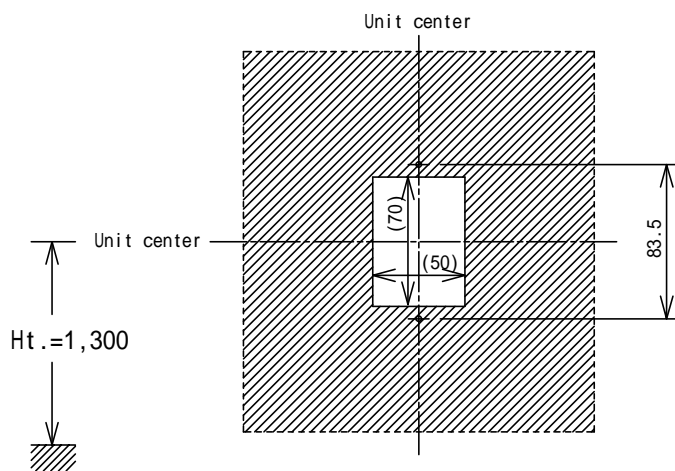


50(W) x 70(H): Opening cut out on the wall.

DESCRIPTION MASTER STATION(5-call)	FIG. NAME PRODUCT DRAWING	UNIT mm	DATE 3 February, 2003
MODEL NO. LEF-5	FIG.NO. 11435301-1-2	PAGE 1/2	REVISION 2
AIPHONE			

WIRING DIAGRAM

Example: Intermix system

Wiring may vary according to combination of Master & Sub stations.

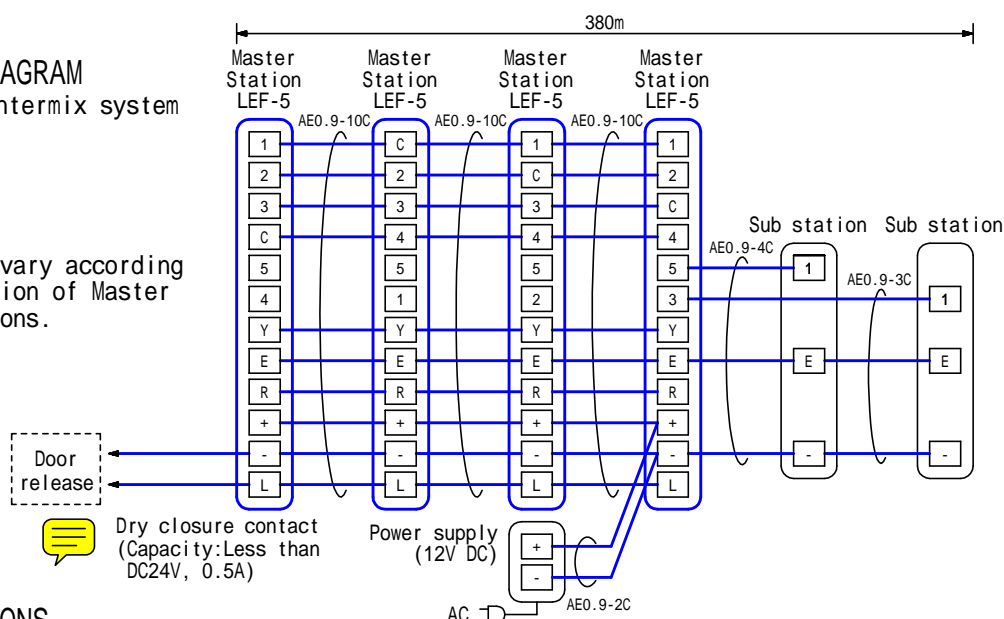

RESTRICTIONS

In single-master configuration, do not remove a shorting link between terminals **E** - **-** .
In intermix configuration, sub station is considered to ring up to two Master station.

FUNCTIONS

Placing / receiving a call & communication with a Master station. Depress a selector button and press CALL button. Then, initiator presses TALK button to transmit, and releases to receive. (Station-selected LED & In-use LED are steadily lit.)
The receiving station replies handsfree remotely.
Placing / receiving a call & communication with a Sub station. Depress a selector button and press CALL button. Then, Master station controls communication w/TALK button. (Station-selected LED & In-use LED are steadily lit.)
During communication, the sub's call-in LED stays lit to indicate.
Putting own station in Privacy mode with PRIV button in depressed position, to prevent eavesdropping by any other Master station. (Privacy mode LED is steadily lit.)
Activating door strike at communicating door station by depressing DOOR RELEASE button.
Putting the communication in OFF and standby position, by depressing OFF button.
When the external signaling device (buzzer, etc.) is installed, the Master station is called by buzzer, etc. as well as an ordinary call tone.

SETTING

Adjusting communication volume (sliding) with Speech volume control.
Adjusting Music & All-call volume (sliding)..... with BGM volume control.
Adjusting call tone volume (3-level)
..... with Call tone volume control (beneath directory card)

SPECIFICATIONS

Power source	DC 12V, supplied from an Aiphone's Power supply
Current consumption	300mA max.
Output	800mW
Type of communication	Open voice handsfree communication controlled by initiator Master station
Capacity	Up to 5 Master or sub stations
Call tone	Master station: Electronic Beep tone & voice direct Sub/door station: Electronic Beep tone only (with a sub call-in LED lit)
Mounting	Desk or Wall-mount Use terminal box (LEW-5) for desk-top or wall use w/heavy cable run.
Electrical box	Single-gang box
Housing	ABS plastic
Weight	Approx. 500g
Unit color	Snow white & gray, two-tone
Remarks	Set or release Privacy mode (mic. cutoff is on or back to normal.)

DESCRIPTION	FIG. NAME	UNIT	DATE
MASTER STATION(5-call)	WIRING/RESTR./FCN.	mm	3 February, 2003
MODEL NO.	FIG.NO.	PAGE	REVISION
LEF-5	11435301-2-2	2/2	3

AIPHONE