

LEF Series

OPEN VOICE SELECTIVE CALL INTERCOM

Models:

LEF-3C

(3-call master)

LEF-5C

(5-call master)

LEF-10C

(10-call master)


INSTRUCTIONS

The LEF-C Series is a selective calling open voice, audio only system with the capacity of up to 11 total stations. The system can be designed to meet a wide variety of needs, including any combination of master and sub stations, up to its maximum capacity.


1

NAMES AND FUNCTIONS


Master Stations LEF-5C

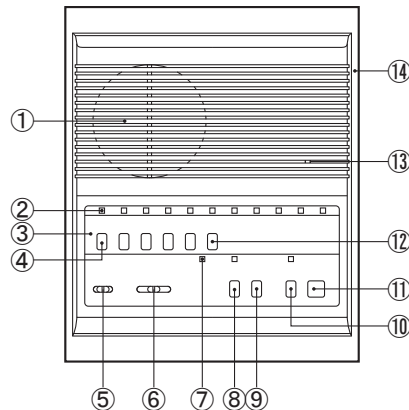


- ① Speaker
- ② Sub call-in annunciator LED
(also illuminates on master to indicate the station is being selected)
- ③ Directory card & button identification plate
- ④ Station selector button
- ⑤ Music volume control
- ⑥ Communication volume control
- ⑦ Occupied LED
- ⑧ All-call button & mode indicator
- ⑨ Door Release button (not included on LEF-3C)
- ⑩ Privacy button & mode indicator
- ⑪ Talk button
- ⑫ OFF button
- ⑬ Microphone
- ⑭ Chassis




LEF-10C

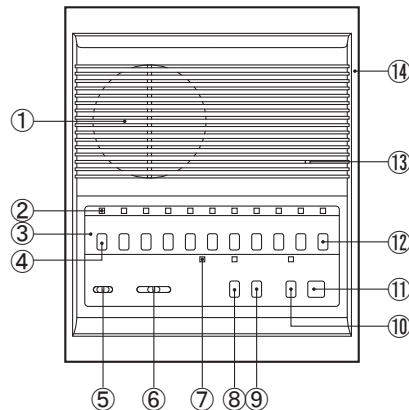

Mounting Accessories;




Wood screw(4)
(for wall-mounting)



Screw(4)
(for mounting to back box)


NAMES AND FUNCTIONS (continued)

Master Station LEF-3C

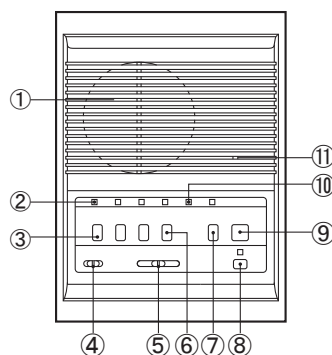


- ① Speaker
- ② Call annunciator LED
- ③ Station selector button
- ④ Music volume control
- ⑤ Voice volume control
- ⑥ OFF button
- ⑦ Privacy button & mode indicator
- ⑧ All-call button & mode indicator
- ⑨ TALK button
- ⑩ Occupied LED
- ⑪ Microphone

Sub master station LEF-1C

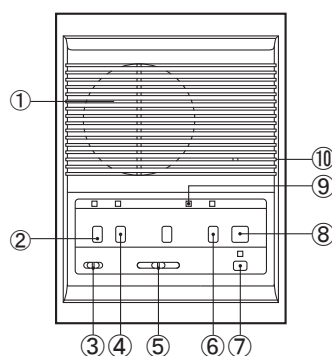


- ① Speaker
- ② Privacy button & mode indicator
- ③ Music volume control
- ④ Door release button
- ⑤ Voice volume control
- ⑥ Occupied LED
- ⑦ OFF button
- ⑧ All-call button & mode indicator
- ⑨ TALK button
- ⑩ Microphone
- ⑪ Microphone

Indoor sub stations LE-B, LE-BN

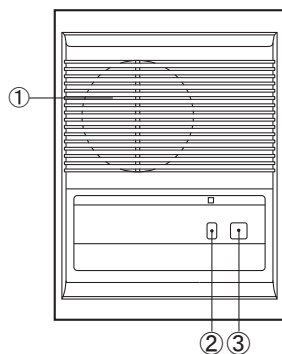


- ① Speaker/microphone
- ② Privacy button & mode indicator
(LE-BN only)
- ③ CALL button

Weather-resistant sub stations LE-D (surface, plastic)

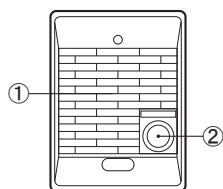


- ① Speaker

LE-DA (flush, stainless)

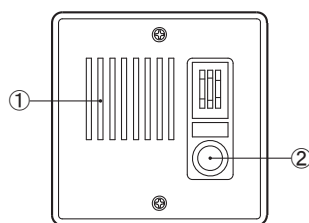

- ② CALL button

LE-DL (surface, anodized aluminum)

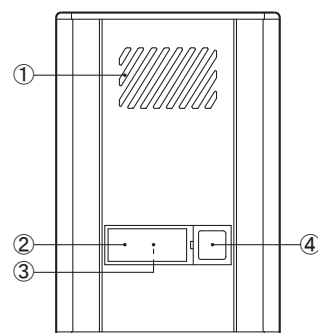

- ① Speaker
- ② Directory card
- ③ Illumination lamp
(under directory)
- ④ CALL button

2

FEATURES

1. A wide variety of system configurations. All-master, Single-master or Intermixed systems can be created.
2. 3-call, 5-call & 10-call masters intermixable.
3. All-call from any LEF-C master station (when system includes BG-10C).
4. Background music (*BG-10C is required*).
5. LEF-1C sub master adds more versatility, *having All-call and door answering capabilities. (BG-10C is required)*

3

SYSTEM COMPONENTS

Basic Audio Communication

* Master stations; <i>Max. 11 stations of all types</i> Select a suited master station for each location to form basic audio communication network. Listed models are semi-flush mount.	* Models Available; LEF-3C: 3-call LEF-5C: 5-call LEF-10C: 10-call LEF-1C: 1-call sub master
* Sub stations; For locations requiring only calling one or a few master room stations. Listed models are semi-flush mount.	LE-B: Standard LE-BN: Privacy
* Door stations; To receive calls from guests, etc., To be located at front door, rear door, or gate for entry access. Weather resistant.	LE-D: Surface, plastic cover LE-DA: Flush, stainless steel cover LE-DL: Surface, anodized aluminum cover
* Power supply; To supply power for audio communication network, select either power supply to suit the system.	PS-1208UL / PS-1208BF PS-1208S / PS-1208 : DC 12V, 0.8A. LEF units

Optional functions; Video

* All Call, Door Chime, and Music distribution; To have the All Call feature, and a chime from the door station(s), include the BG-10C.	BG-10C: All Call & Chime Adaptor PS-1225UL or PS-1225S: Power supply for BG-10C
--	---

4

INSTALLATION

(1) Mounting guidelines

- Aiphone Corporation recommends that when installing any of its communication products, the wiring must be run at a distance of at least 2 feet (60cm) from any AC wiring, fluorescent lights, or dimmer switches.
- Aiphone Corporation is not responsible for improper installations of its products which result in interference generated by AC voltage, dimmer switches, fluorescent lighting fixtures, or other similar electrical devices. If noise is induced into the intercom system from one of these sources, it must be corrected at the source by the installing party.

LEF Audio Communication System Pre-Installation: Wiring

- ① Select the proper type of wire for the system being installed. Use the maximum number of conductors for the system. Consult the following wiring information to determine how many conductors will be required for your system, and what gauge is required.
- ② Shielded wire is recommended. It may help to minimize possible interference from outside sources. Use a multi-conductor cable with an overall shield, not twisted pairs. Run the cable in a "daisy-chained" configuration, in and out of each station in the system from beginning to end. Sub stations may be homerun to the nearest master station in the system. Door stations should be homerun to the main master station (where the BG-10C is wired into the system).

Note;

Some intercom stations require the same common wires, plus individual wires for each station on the same wire run. Assure that the cable has enough conductors for every station included. When running intercom cable, maintain a distance of at least 24" (60cm) from any AC wiring, fluorescent lighting, and dimmer switches. When crossing AC wires, do so at a 90° angle.


Avoid running intercom cable in the same stud space with electrical wiring, and install the intercom station on a different portion of the wall from electrical devices.

Installation


- ① Lay out your system in advance, determining which stations will be located in each room, and what their respective station number will be. Fill in this information on your wiring diagram.
- ② Cut the proper sized holes in the wall to semi-flush mount the intercom stations.
- ③ Separate the intercom from the back chassis by carefully removing the control panel cover and directory strip and loosening the screws. Lift up on the intercom portion before pulling it outward. Unplug the connectors, and store the intercom unit in the box until the wiring is completed.
- ④ Install the back chassis in the wall, and make wire connections as shown in the appropriate wiring diagram. Be sure to tighten screws securely onto the wires.
- ⑤ Reattach the intercom unit to the back chassis with the connectors, and place it on the back chassis from the top. Tighten the screws, and replace the directory strip and cover. Remove the plastic film over the control panel cover.
- ⑥ After all connections are made and intercom stations installed, test the operation of the system. Leave these instructions with the end-user for their reference. Fully train the end-user as to the functions and features of their intercom system. Advise the end-user on which rooms are assigned to each station number so they can fill in the directory card on each station.

(2) Mounting instructions


LEF-5C or LEF-10C

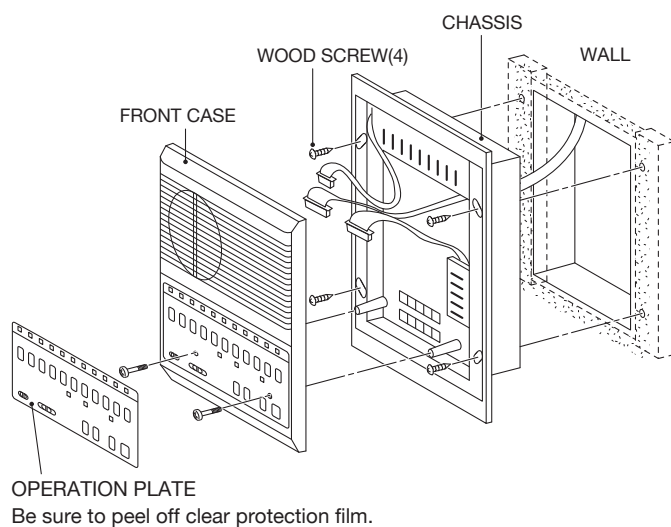


CUT-OUT HOLE DIMENSIONS

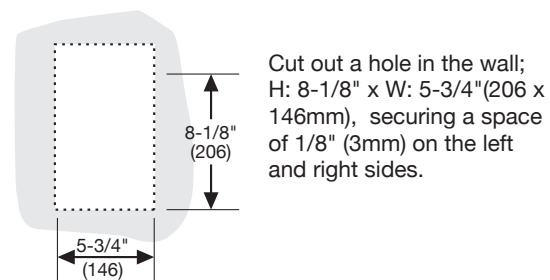


To remove the operation plate, push either left or right side of the plate.

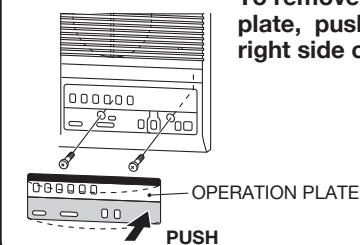


LEF-3C or LEF-1C

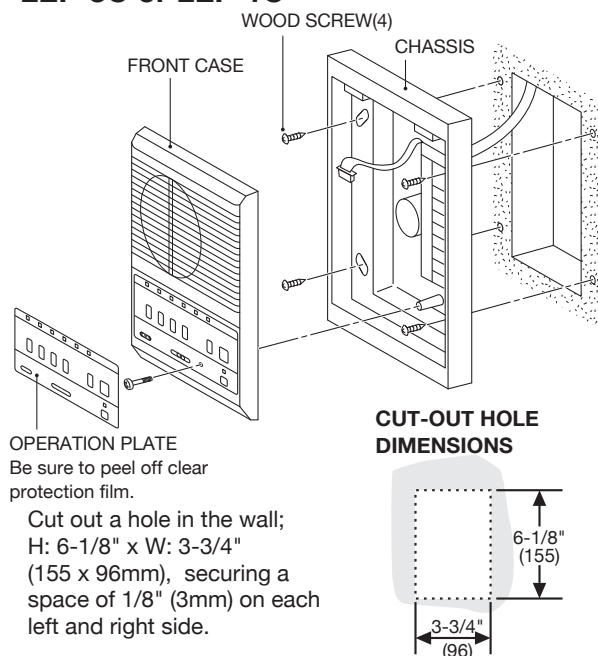


CUT-OUT HOLE DIMENSIONS

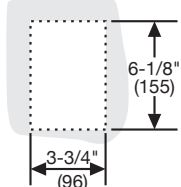


LE-B or LE-BN

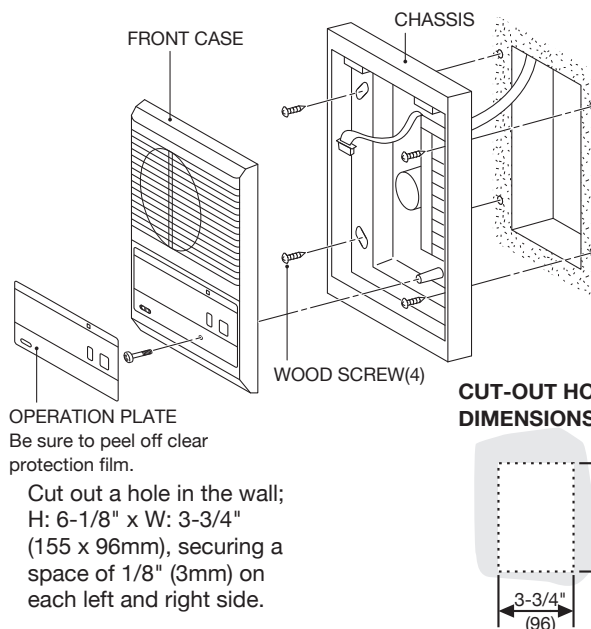


CUT-OUT HOLE DIMENSIONS

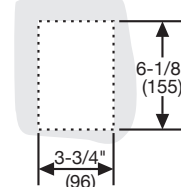


LE-D

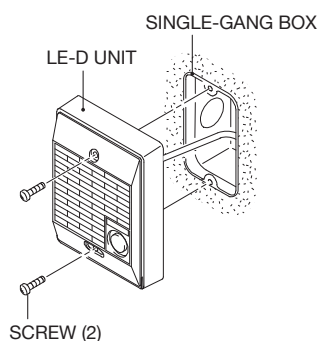

LE-DA

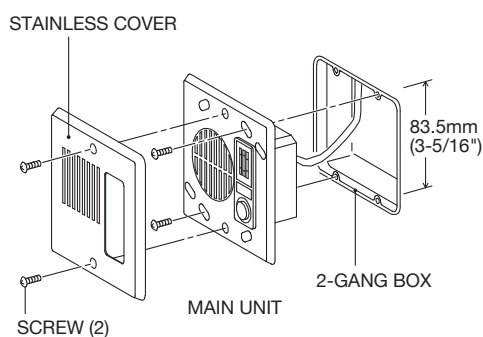

LE-DL

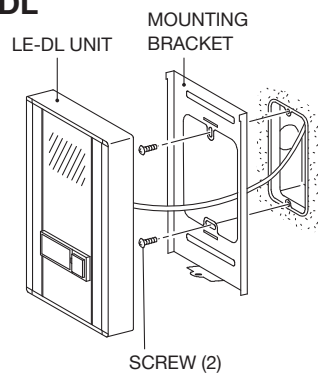


4

INSTALLATION (continued)


(3) Actual terminal locations

LEF-5C
LEF-10C

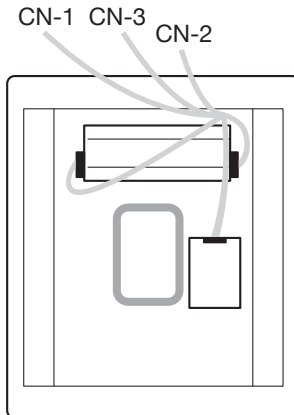


- CN 1** 1 ~ 10 Station communication channels for selective calling
E for common audio communication
- CN 2** +, - for power supply
C for receiving a call and music
R for occupied LED
S for connection of external music speaker (connected to S - E terminals)
Y for controlling occupied mode when called
L for door release (+12V DC when door release button is pressed)
P1 for controlling all call
P2, P3 for all call output
- CN 3** K1 ~ K10 for selective door release, or control of remote devices (K# becomes negative when station button is depressed)

LEF-3C

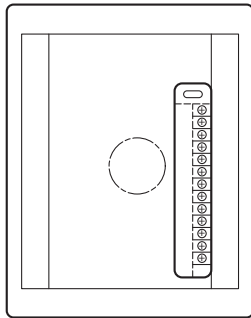


- 1 ~ 10 Station communication channels for selective calling
E for common audio communication
+, - for power supply
C for receiving a call and music
R for occupied LED
S for connection of external music speaker (connected to S - E terminals)
Y for controlling occupied mode when called
P1 for controlling all call
P2, P3 for all call output

LEF-1C

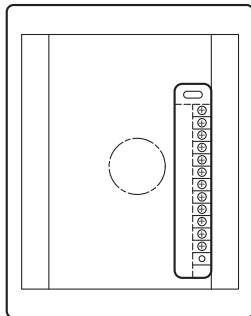


- C for receiving a call from master and music
E for common audio communication
DA for door station communication
+, - for power supply
R for occupied LED
Y for controlling occupied mode when called
L for door release (+12V DC when door release button is pressed)
P1 for controlling all call
P2, P3 for all call output
K for door release control

LE-B,
LE-BN

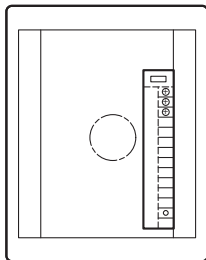


LE-D

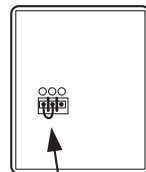


Shorting link

LE-DA

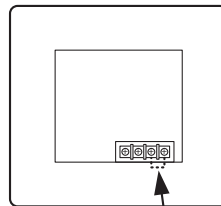

Shorting link

LE-DL

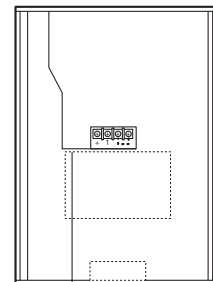


- 1 Voice communication (to # on LEF-C)
E Common communication
- Connect to - terminal

- +, - to supply power to lamp
1 voice communication (to # on LEF-C)
E Common communication

5

WIRING DIAGRAMS - Important Wiring Rules

Door or sub station to master station intercom wiring, single or multi-master station

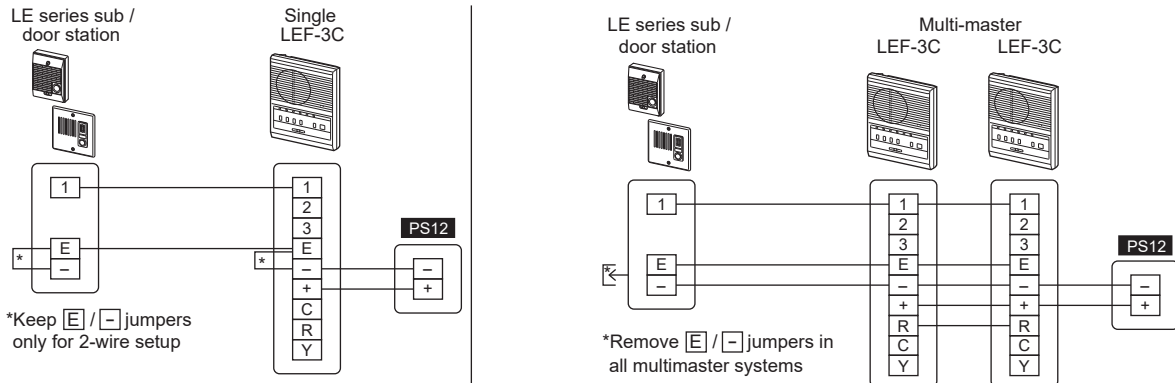

Intercom Operation:


- To initiate call at sub station, push the station's Call button.
- To answer sub station call at LEF-3C, push the appropriate Station Selector button.
- To talk to sub station, press and hold TALK and release to listen.

Notes: [1] from a sub station can wire to any number [1], [2], or [3] but never [C].


[C] is only used for internal communication between master stations. See below.

Master to Master intercom wiring, internal communication between master stations

Important: Never wire [C] to another master station's [C] terminal.

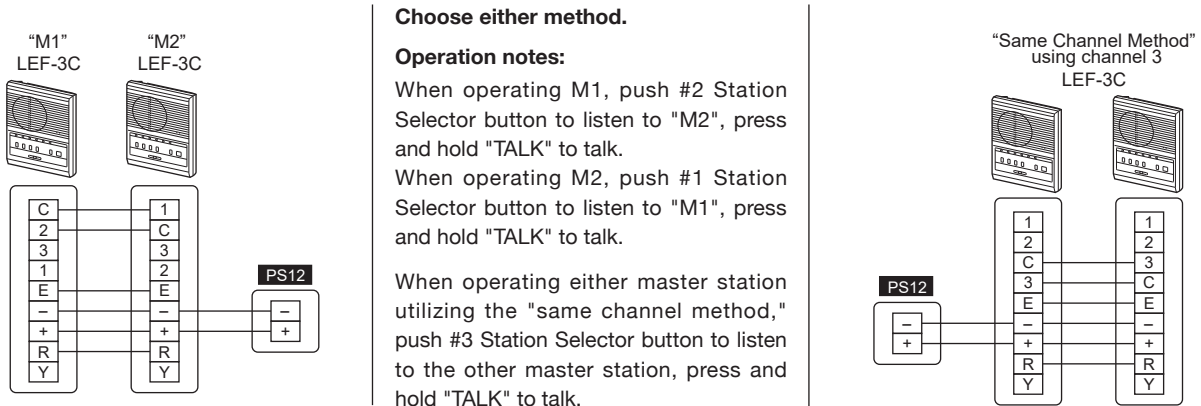

Master to sub intercom only, no internal communication between master stations

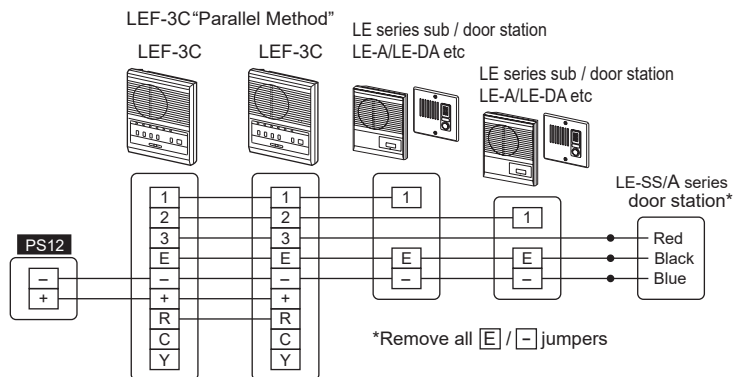

LE-SS/A series stations use colored leads

Red	[1] is red lead
Black	[E] is black lead
Blue	[-] is blue lead

Notes:

[1] from a sub station can go to [1], [2] or [3] but never [C].

Only master stations can answer calls and communicate with sub stations.

*LE-SS/A is manufactured by Aiphone Corporation in the U.S.

Intercom Operation:

- To initiate call at sub station, push the station's Call button.
- To answer sub station call at LEF-3C, push the appropriate Station Selector button.
- To talk to sub station, press and hold TALK and release to listen.

PS12 PS-1208UL / PS-1208BF / PS-1208S / PS-1208, PS-1225DM

Door release relay wiring, one relay per door station


LEF-3C



White
Brown
Red
Orange

- White lead is 12V DC when key button is pressed. Colored lead is ground when channel is selected.
- Brown lead is #1
- Red lead is #2
- Orange lead is #3
- Relay is activated when channel is selected and door release button is pressed.

LEF-3C



to white lead < Black
to # channel's < RY-PA
Black wires are a coil. Provide 12V DC to trigger contact.

AC Transformer


Door strike

Contact
Normally Open (N/O) dry contact
110V AC, 1A
24V DC, 1A

LEF-3C



LE-D/LE-DA



PS12

1
E
-
+
White
Brown
Red
Orange

1
E
-
+

AC Transformer


Door Strike

Black RY-PA Yellow

Operation:

- To release the door, push the Station Selector button, then press "1-0" to release.
- When the coil gets 12V DC, the contact changes state, momentarily. Use the relay to trigger a Request-To-Exit input on any standard access control system, or close an open circuit (shown above).

External Signaling and CCTV relay wiring, one of either relay (or both) per door station

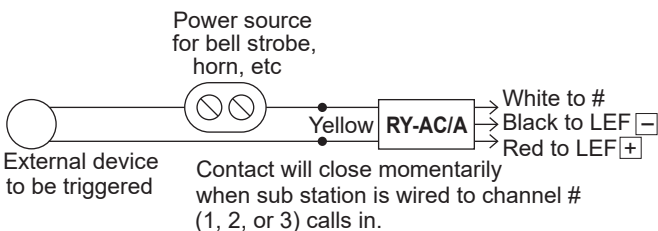

to PS12 +
to # channel's selective gnd. < Black RY-PA Yellow > to CCTV input

LEF-3C channel's selective gnd. is
#1 selective gnd. is brown lead
#2 selective gnd. is red lead
#3 selective gnd. is orange lead


Contact will be closed as long as channel # is selected

PS12 PS-1208UL / PS-1208BF / PS-1208S / PS-1208, PS-1225DM


(1) LEF-3C audio communication system

No.	SYSTEM	MASTER	DOOR (audio)	ROOM SUB
1	All-Master system	4		
2	with one door station	3	1	
3	Intermixed system	2	1	1
4	Single-Master system	1	1	2


1 All-Master system

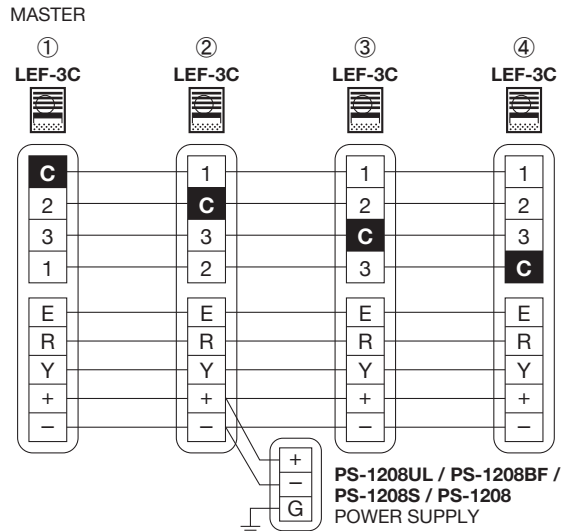

2 All-Master system w/one door station

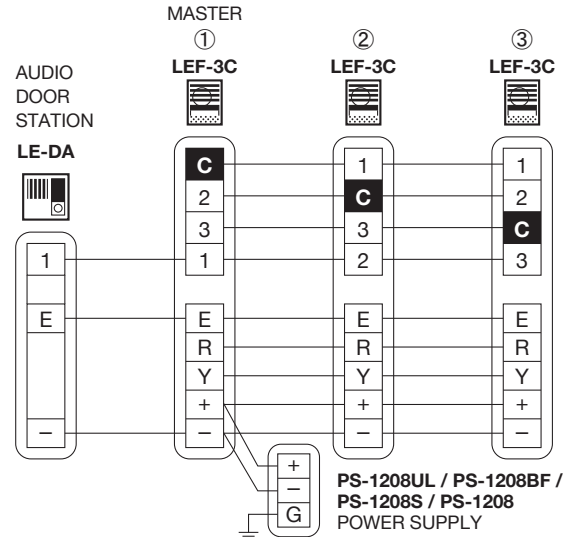


3 Intermixed System

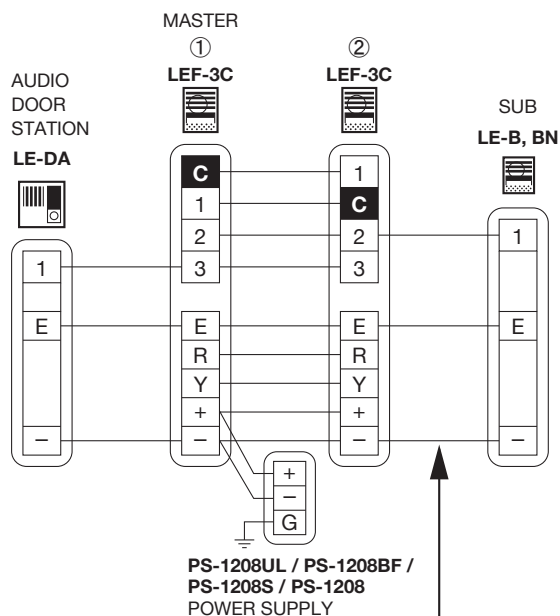

In Intermixed System.
Remove the shorting link on all stations as 3 wires are required to each sub.

4 Single-Master system

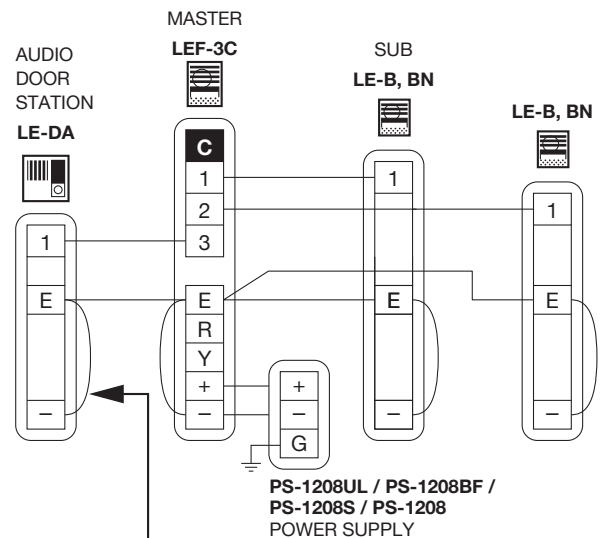


In single-master system.
If using 2 wires to each sub, shorting link MUST REMAIN ATTACHED on all stations.
If using 3 wires to each sub, remove shorting link on all stations.


(2) LEF-5C audio communication system

No.	SYSTEM	MASTER	DOOR (audio)	ROOM SUB
1	All-Master system	6		
2	All-Masters w/ door station	5	1	
3	Intermixed system	3	1	2
4	Single-Master system	1	1	2


1 All-Master system

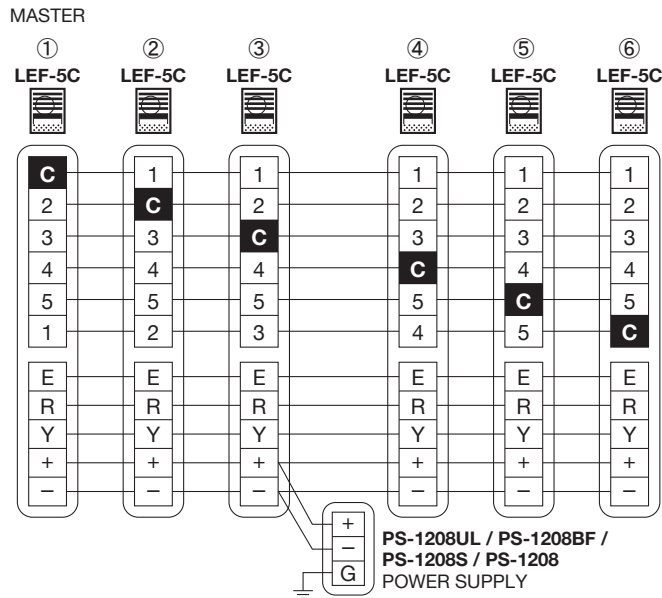


2 All-Master system w/one door station

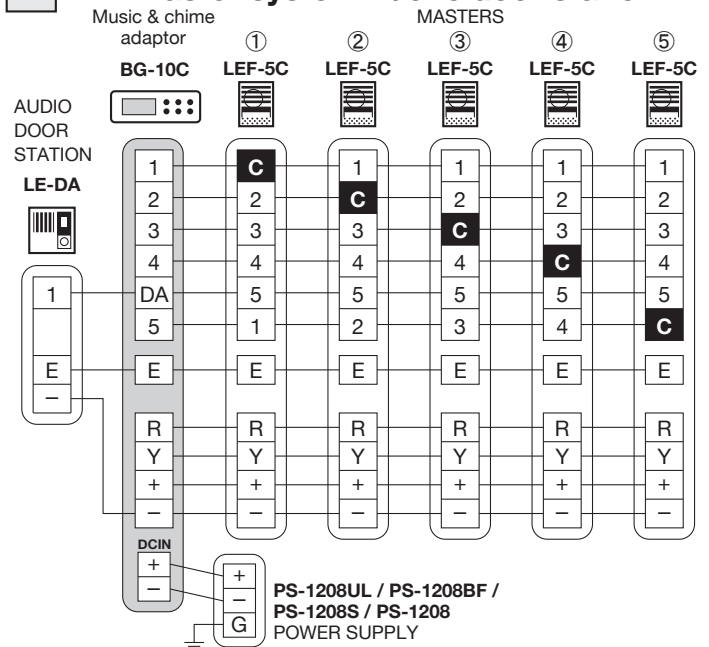

3 Intermixed system

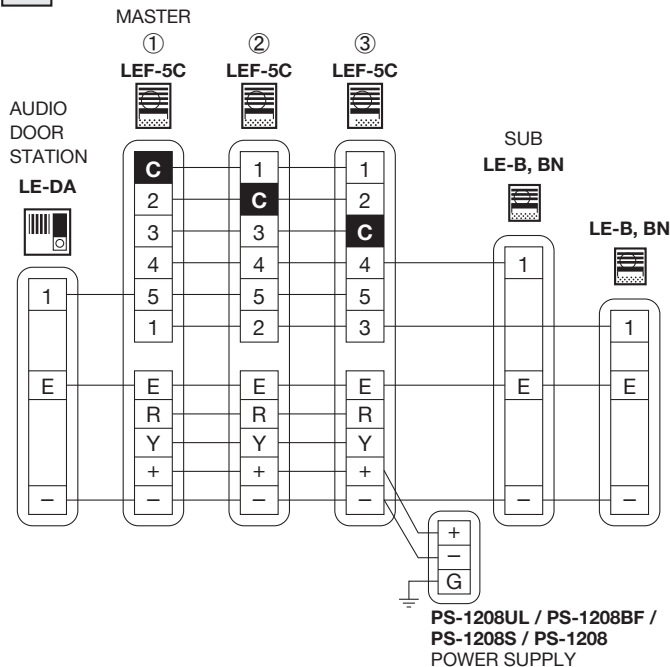

4 Single-Master system

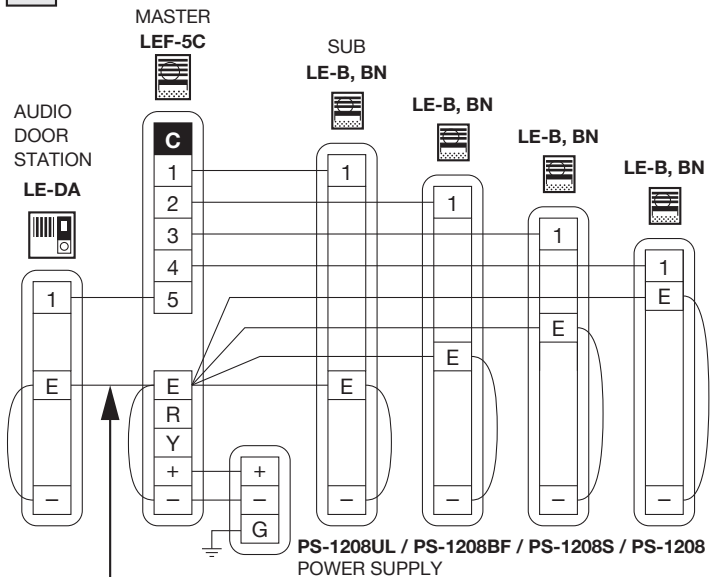


In single-master system: (Home run wiring only)
Shorting link (between E & - terminals) on the master and all subs MUST REMAIN ATTACHED.

For daisy-chained wiring: Remove jumpers and run multi-conductor cable with 2 common plus 1 individual wire per station.

(3) LEF-10C audio communication system


1 All-Master system with one door station

All call & chime from door

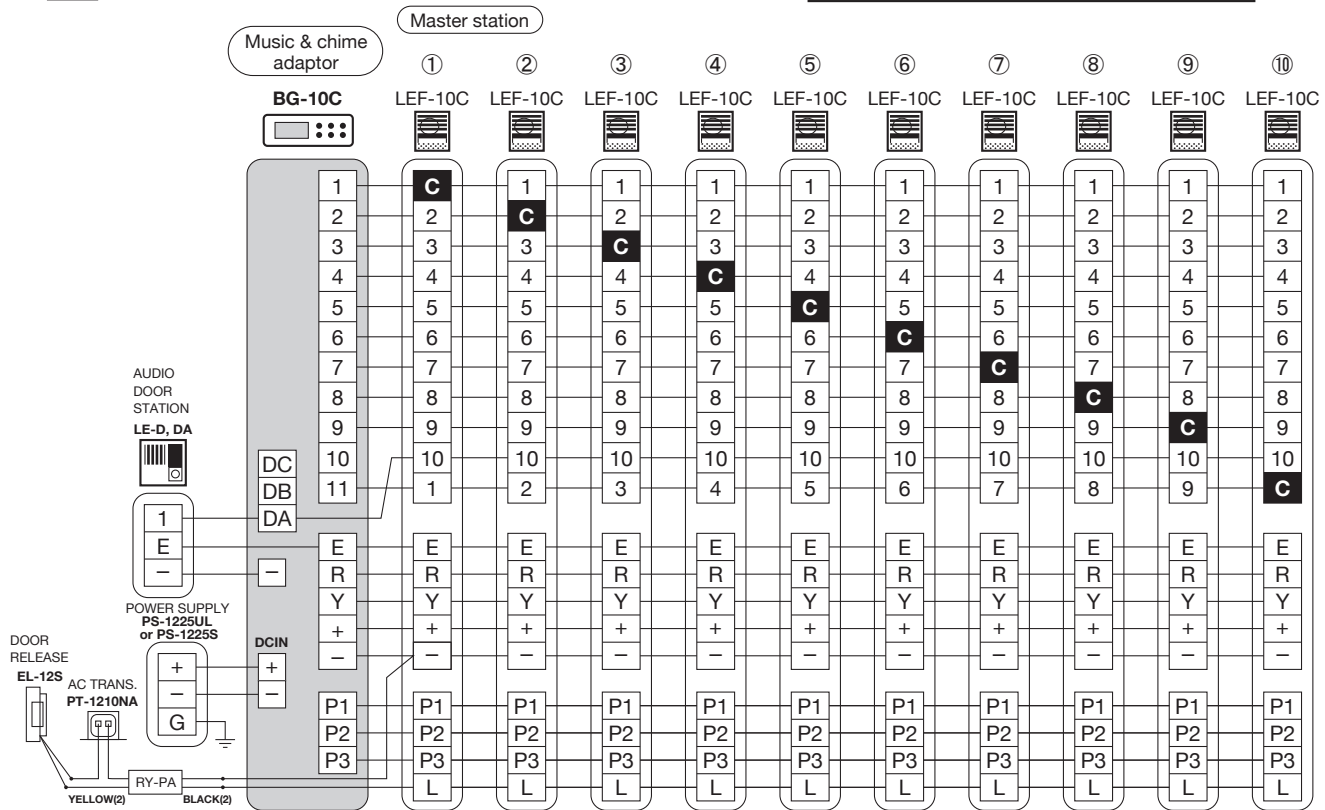


2 Dual Master w/ sub-masters

All call & chime from door

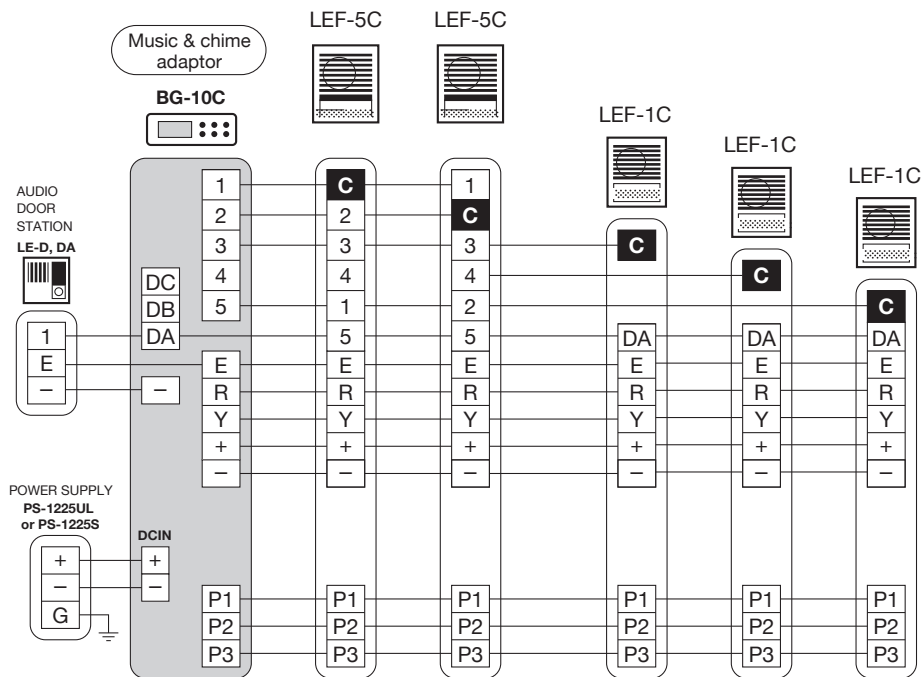

(4) RY-AC/A connection

To activate a remote doorbell with the LEF-C system, use the RY-AC/A relay.

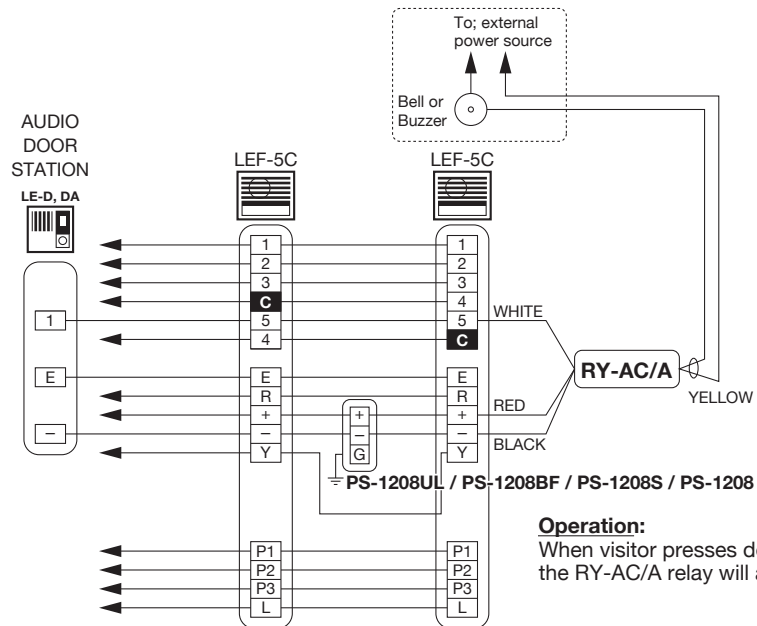

6

SPECIFICATIONS

* Power source:	DC 12V. Use PS-1208UL/PS-1208BF/PS-1208S/PS-1208 in an audio system without the BG-10C. Use PS-1225UL / PS-1225S in a system that includes the BG-10C.																				
* Current consumption:	Max. 300mA per station																				
* Power output:	Max. 800mW at 20 ohm (reception) Max. 500mW at 20 ohm (transmission)																				
* Calling:	<u>From master to master / sub;</u> by voice or electronic mono tone <u>From LEF-1C to master;</u> by all call announcement																				
* Communication:	Press-to-talk at calling master. Handsfree communication at door, sub and receiving master.																				
* Wiring:	<u>Master Stations:</u> Communication only: 5 common wires plus 1 per station in the system, looped. Comm. and All Call: 8 common wires plus 1 per station in the system, looped. Comm., All Call, Door Release: 9 common wires plus 1 per station in the system, looped. <u>Standard Sub:</u> 2 common wires plus 1 per station on the loop Single Master System: 2 wires per sub, homerun.																				
* Wiring distance:	<i>Between two farthest master stations or master and each sub;</i> <table><tr><td>AWG</td><td>24AWG</td><td>22AWG</td><td>20AWG</td><td>18AWG</td></tr><tr><td>Distance</td><td>400'</td><td>650'</td><td>1000'</td><td>1600'</td></tr><tr><td>Diameter</td><td>0.5mm</td><td>0.65mm</td><td>0.8mm</td><td>1.0mm</td></tr><tr><td>Distance</td><td>120m</td><td>200m</td><td>300m</td><td>480m</td></tr></table>	AWG	24AWG	22AWG	20AWG	18AWG	Distance	400'	650'	1000'	1600'	Diameter	0.5mm	0.65mm	0.8mm	1.0mm	Distance	120m	200m	300m	480m
AWG	24AWG	22AWG	20AWG	18AWG																	
Distance	400'	650'	1000'	1600'																	
Diameter	0.5mm	0.65mm	0.8mm	1.0mm																	
Distance	120m	200m	300m	480m																	
* Switching contact capacity for door release	AC 110V, 1A. DC 24V, 1A (selective door release or control of external devices), on output of RY-PA relay.																				
* Selector switch contact capacity: (K Terminals)	DC 12V, 1A																				
* Dimensions & weight:	<u>LEF-3C, LEF-1C;</u> 210 x 155 x 35 (mm); 8-1/4"H x 6-1/8"W x 1-3/8"D, Approx. 470g (1.04 lbs.) <u>LEF-5C, LEF-10C;</u> 240 x 200 x 35 (mm); 9-7/16"H x 7-7/8"W x 1-3/8"D LEF-5C Approx. 680g (1.50 lbs.) LEF-10C Approx. 750g (1.65 lbs.)																				

WARRANTY

Aiphone warrants its products to be free from defects of material and workmanship under normal use and service for a period of one year after delivery to the ultimate user and will repair free of charge or replace at no charge, should it become defective upon which examination shall disclose to be defective and under warranty. Aiphone reserves unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship; and whether or not the product is within the warranty. This warranty shall not apply to any Aiphone product which has been subject to misuse, neglect, accident, power surge, or to use in violation of instructions furnished, nor extended to units which have been repaired or altered outside of the factory. This warranty does not cover batteries or damage caused by batteries used in connection with the unit. This warranty covers bench repairs only, and any repairs must be made at the shop or place designated in writing by Aiphone. This warranty is limited to the standard specifications listed in the operation manual. This warranty does not cover any supplementary function of a third party product that is added by users or suppliers. Please note that any damage or other issues caused by failure of function or interconnection with Aiphone products is also not covered by this warranty. Aiphone will not be responsible for any costs incurred involving on site service calls. Aiphone will not provide compensation for any loss or damage incurred by the breakdown or malfunction of its products during use, or for any consequent inconvenience or losses that may result.