



PRODUCT DRAWING

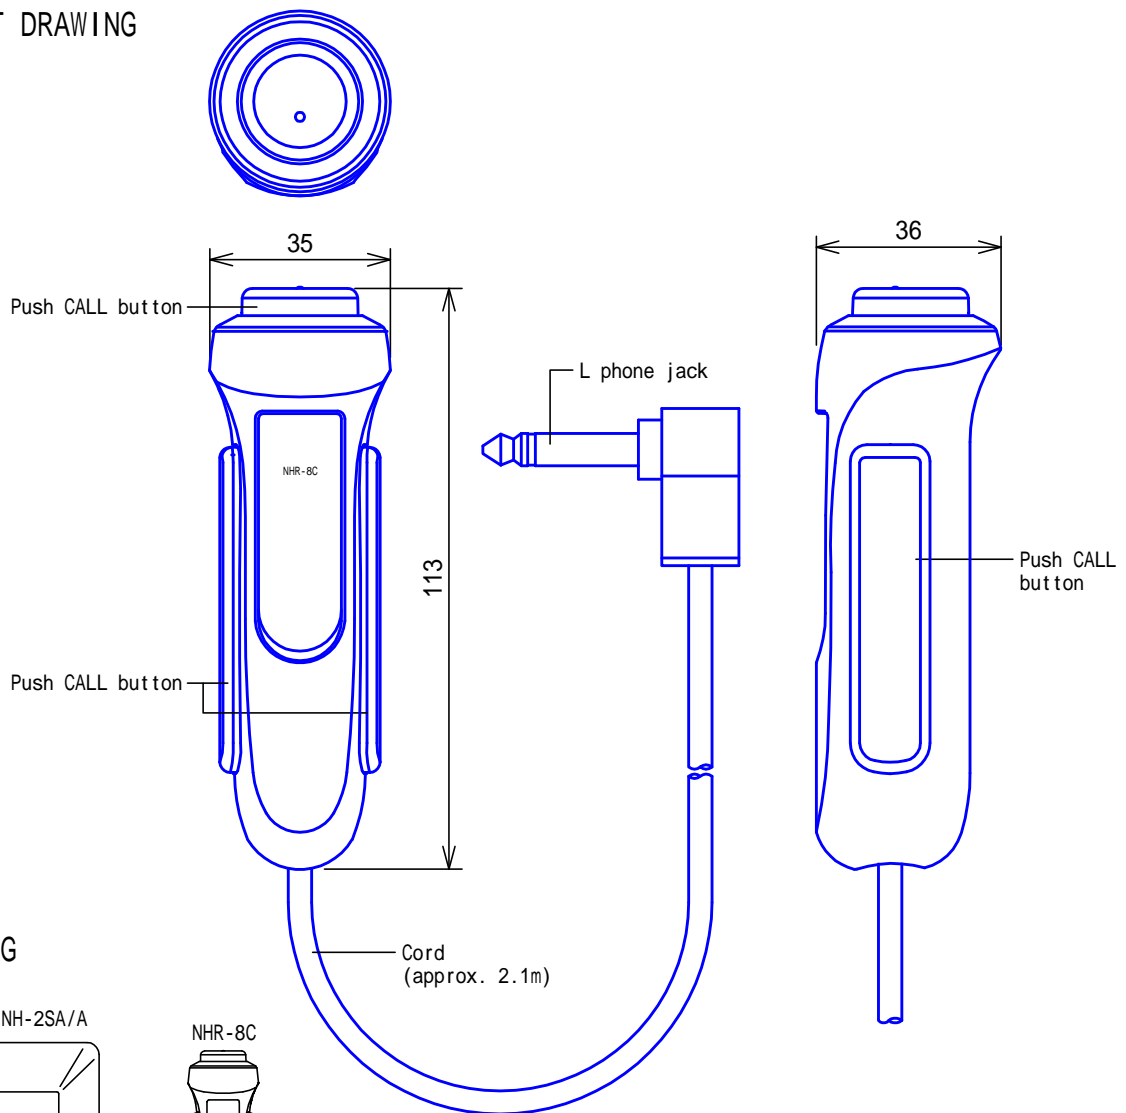

MOUNTING

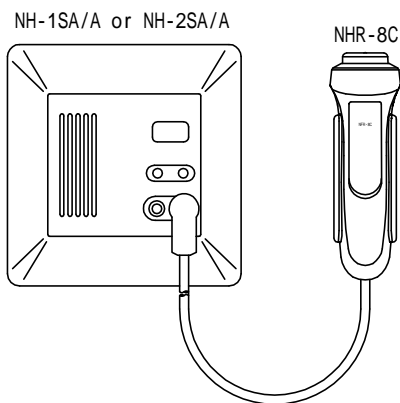

FUNCTIONS

When plugged to Bedside sub station;
 Activates a Routine call at Master station.
 Corridor call light is a steady white lamp.
 When pulled out of jack;
 Activates a Cord-out trouble call, most urgent level,
 at Master station.
 Corridor call light is a flashing white lamp.

SPECIFICATIONS

Power source	None required.			
Capacity	One for NH-1SA/A. Two for NH-2SA/A.			
Connector	1/4" 'L' phone jack			
Mounting	Plugs into Bedside sub station			
Weight	110g(approx.)			
Housing	Textured PVC plastic over fire-retardant plastic core			
Unit color	Unit, Cord: White Push CALL button: Orange			
Remarks	Certification: UL 1069 Listed. C-UL Canadian Standard C22.2.			
DESCRIPTION BEDSIDE CALL CORD	FIG. NAME PRODUCT/SPEC./FCN.		UNIT mm	DATE 9 June, 2011
MODEL NO. NHR-8C	FIG.NO. 05577-1-1	PAGE 1/1	REVISION 1	AIPHONE