



# IX SERIES

## IX-PA Network Paging Adaptor

### Installation & Programming Guide

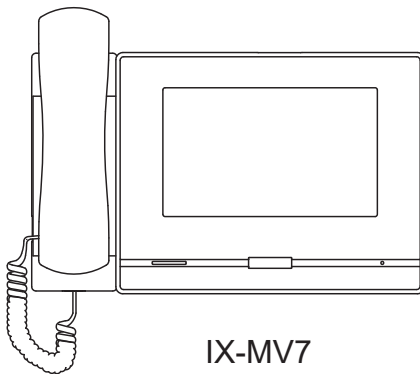

IX-MV7

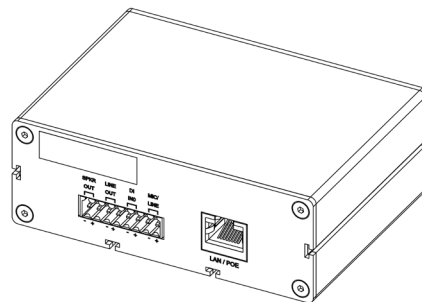


IX-PA

#### ATTENTION:

This is an installation and programming manual addressing wiring and programming for the IX-PA paging adaptor only. For general IX Series programming, refer to the IX Support Tool Setting Manual or IX Quick Start Programming Guide.

## WIRING:

The IX-PA is a paging adaptor designed for use with the Aiphone IX Series network intercom system. The paging adaptor has an address book that supports up to 50 stations and can be connected to 3rd party devices. The paging adaptor can be accessed by an IX-MV7 master station or an instance of the IX Mobile App to allow pages to be broadcast through the IX-PA 600Ω or 8Ω output. A 3rd party device can be connected to the audio input to send messages to the paging adaptor's address book.

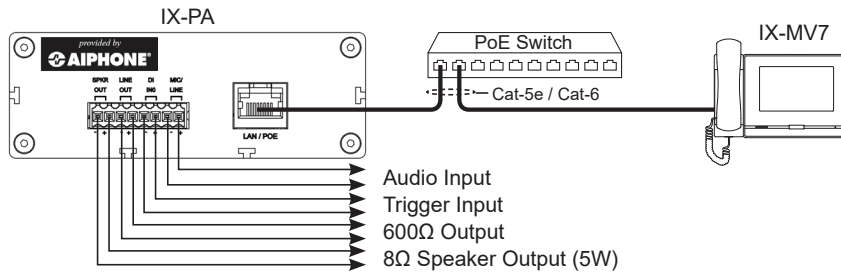

## Step 1: Logging into the IX-PA Paging Adaptor

### IMPORTANT!

The IX Series equipment must be programmed and operational prior to programming the IX-PA paging adaptor.

The IX-PA adaptor is defaulted to DHCP. When it powers on with factory default settings, it will request a DHCP address. If it does not receive one, it will wait for any computer using ARP to locate X.X.X.168 and respond, and then use that address until it is rebooted or a static IP address is assigned. The assigned IP address will be announced through the 8Ω speaker (if attached). When a static address is assigned, it will not request DHCP nor listen for .168, it will simply power on with the address assigned. Enter the announced or default .168 IP address into a web browser address bar to access the IX-PA.

## Step 2: Assigning Station Information

Once logged into the adaptor, the **Station Information** screen shows *Station Number*, *Station Name*, and *Location* assignments. An optional *Web Password* can also be assigned to the adaptor from this screen to prevent unauthorized access.

The screenshot shows the 'Station Information' screen in the AIPHONE IX System Setting web interface. The screen has a left sidebar with 'Station Information' selected. The main area contains four input fields: 'Station Number' (with a note '3-5 digits'), 'Station Name' (with a note '1-24 alphanumeric characters'), 'Location' (with a note '1-24 alphanumeric characters'), and 'Set Web Password'. An 'Update' button is in the top right corner.

Note the **Station Number** & **Station Name** for use in Step 7: Adding the IX-PA to an IX Series System.

After entering a unique **Station Number** and **Station Name**, click the **Update** button to save and restart the adaptor.

## Step 3: Network Settings

Select **Network Settings** from the menu on the left. Enter a unique *IP Address*, *Subnet Mask*, and *Gateway IP Address*. Consult with your IT department for the appropriate addresses to be assigned.

\* If changes are made to the IP address, the web browser will need to be redirected to the new IP address after updating.

The screenshot shows the 'Network Settings' screen in the AIPHONE IX System Setting web interface. The screen has a left sidebar with 'Network Settings' selected. The main area contains several settings: 'SonicIP' (with 'Enable' selected), 'IP Address' (192.168.1.168), 'Subnet Mask' (0.0.0.0), 'Gateway IP Address' (0.0.0.0), 'DHCP Host Name', 'MAC Address' (00:08:E1:05:09:A8), and 'Web Server Port' (80). An 'Update' button is in the top right corner.

There are additional settings on the Network Settings page that can be adjusted: **SIP Settings**, **Audio Settings**, and **Packet Priority**. The default settings will work in most cases. Adjust as necessary.

Note any **Network Settings** changes for use in Step 8: Assigning IP Address.

The screenshot shows the 'SIP Settings', 'Audio Settings', and 'Packet Priority' sections in the AIPHONE IX System Setting web interface. The 'SIP Settings' section includes 'Multicast Source IP' (0.0.0.0) and 'SIP Port' (5060). The 'Audio Settings' section includes 'Audio CODEC' (uLaw / 8 kHz (G.711)) and 'RTP Idle Detection Time' (10 seconds). The 'Packet Priority' section includes 'QoS/DSCP' (0). An 'Update' button is in the top right corner.

Click the **Update** button to save any Network Settings changes and restart the adaptor.

## Step 4: Paging Settings / Address Book

Select **Paging Settings** from the menu on the left. The *Paging Pretone* heard from speakers connected to this adaptor can be selected. *Rebroadcast* to this station's address book can be enabled, allowing any page the IX-PA receives to be sent to all stations in its address book. Under **Outgoing Paging Settings**, the *Trigger Input Setting*, *Paging Priority*, *Paging Timeout*, and *Paging Response Timeout* can all be adjusted. The **Address Book** destinations will need to be populated if the paging adaptor is to be used to broadcast a 3rd party source to the IX Series stations. These destination IP addresses will need to match those in the programmed IX Series system. A maximum of 50 stations can reside in the paging adaptor's address book.

Incoming Paging Settings	
Paging Pretone	<input type="text" value="Paging Pretone"/>
Rebroadcast	<input type="text" value="Disable"/>

Outgoing Paging Settings	
Trigger Input Setting	<input type="text" value="Toggle Page On / Off"/>
Paging Priority	<input type="text" value="Normal"/>
Paging Timeout	<input type="text" value="60"/> seconds
Paging Response Timeout	<input type="text" value="10"/> seconds

Address Book	
Destination	Options
Destination 1	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> <input type="text" value="Multicast"/>
Destination 2	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> <input type="text" value="Multicast"/>
Destination 3	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> <input type="text" value="Multicast"/>
Destination 4	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> <input type="text" value="Multicast"/>
Destination 5	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> <input type="text" value="Multicast"/>

Click the button to save any Paging Settings and Address Book changes and restart the adaptor.

## Step 5: Station Hardware Settings (optional)

Select **Station Hardware Settings** from the menu on the left. From this screen, *Output Volume*, *Input Sensitivity*, *Input Gain*, and *Input Source* can be adjusted. The Output Volume by default is set to the max level. Use the drop down to select the desired output if it needs to be lowered. The Input Sensitivity can be adjusted between Low, Normal, and High by using the drop down. The Input Gain can be adjusted between Normal, High, and Max by using the drop down. Select between Microphone and Line using the Input Source drop down.

VOLUME SETTINGS	
Output Volume	<input type="text" value="100"/> %
Input Sensitivity	<input type="text" value="Normal"/>
Input Gain	<input type="text" value="Normal"/>
Input Source	<input type="text" value="Microphone"/>

Click the button to save the Station Hardware Settings and restart the adaptor.

## Step 6: Maintenance (optional)

Select **Maintenance** from the menu on the left. If a Syslog server is being used on the network, the IP address for the server can be entered here. If *Syslog Address* remains 0.0.0.0, the log will be broadcast. Enable *Debug Mode* for additional Syslog messages to aid in troubleshooting. The adaptor can also be restored to factory defaults, the firmware can be updated, or can be rebooted from the **Maintenance** window.

MAINTENANCE	
Syslog Address	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Debug Mode	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Initialization	<input type="text" value="Reset to Defaults"/>
Firmware	Version: 1.0 June 10th, 2016 <input type="text" value="Update Firmware"/>
Reboot	<input type="text" value="Reboot Now"/>

Click the button to save Syslog Address / Debug Mode settings and restart the adaptor.

## Step 7: Adding the IX-PA to an IX Series System

Now that the IX-PA has been programmed, the IX Series system must be updated to see the adaptor. Open the IX Support Tool and select the system to be updated. From the menu on left, select **Identification** from the **Station Information** tree. Click the **Add Station** button at the top of the page. A new window will open.

Use the **Station Type** drop-down and select IX-MV (each IX-PA is treated as an IX-MV). Enter the quantity of stations being added and click **Add**. Assign the new station a number and name. Click **OK** when done.

The Station Information page will now be populated with the new station that was added.

Add New Station			
Select Station Type and enter the number of stations, then click "Add". Up to 50 stations can be added at a time.			
Station Type	IX-MV	1	Station(s)
<b>Add</b>			
Station Information			
Number	Name	Location	Station Type
999	Paging Adaptor		IX-MV
<b>OK</b> <b>Cancel</b>			

## Step 8: Assigning IP Address

Now that the paging adaptor has been added, the IP address will need to be assigned. From the menu on the left, select **IP Address** from the **Network Settings** tree. The newly added station will be in the list of stations. Enter the IP Address, Subnet Mask, and Gateway making sure it matches what was set to the IX-PA during its initial programming in Step 3.

#	Station Information				Network Settings																Text in red are required settings.							
	Identification				IP Address																							
	Number	Name	Location	Station Type	Hostname	IP Version	Static / DHCP	IPv4 Address																				
								IP Address				Subnet Mask				Default Gateway												
								1	2	3	4	1	2	3	4	1	2	3	4									
0001	100	Video Door		IX-DV, IX-DVF(-*)		IPv4	Static	192	168	1	11	255	255	255	0													
0002	101	Audio Door		IX-SS-2G		IPv4	Static	192	168	1	12	255	255	255	0													
0003	200	Security		IX-MV7-*		IPv4	Static	192	168	1	10	255	255	255	0													
0004	999	Paging Adaptor		IX-MV		IPv4	Static	192	168	1	168	255	255	255	0													

Click the **Update** button to save changes.

## Step 9: Creating a Group

Select **Group (for Master)** from the **System Information** tree on the left. The page will default to group 01. Enter a Group Number and Group Name for each master station that needs to page the IX-PA. Locate the paging adaptor from the list of stations to the right and select U. This will assign the station to the group.

#	Station Information				System Information				System Information											
	Identification				Group (for Master)				Group (for Master)											
	Number	Name	Location	Station Type	Group Number	Group Name	Type	Total	Number/Name/Station Type	100 / Video Door / IX-DV, IX-DVF(-*)	101 / Audio Door / IX-SS-2G	200 / Security / IX-MV7-*	999 / Paging Adaptor / IX-MV							
0003	200	Security		IX-MV7-*	01	IX-PA	Audio Protocol	1												
0004	999	Paging Adaptor		IX-MV			Video Protocol	0												
							Audio Protocol	0												

Click the **Update** button to save changes.

### Important:

The IX-PA can only be "paged" from an IX-MV/IX-MV7 master station. In order to page the device, it must be a group or part of a group. If the device is called individually or the group is called, a call failed error will occur. It is recommended to set up one of the speed dial buttons on the master station to be used for paging the group that the IX-PA adaptor resides in.

## Step 10: Uploading Settings

Click **File, Upload Settings to Stations**. Select the stations where any changes were made from the stations listed (i.e. masters). Click **Settings** to upload the settings to the stations. Verify that the upload was successful by checking the Status column.