

LEF-LD

LEF Loudspeaker Intercom System for Long Distance and Elevator Applications

LEF-3-LD, LEF-5-LD, LEF-10-LD, LEF-10S-LD LEF-3C-LD, LEF-5C-LD, LEF-10C-LD

- INSTRUCTIONS -

The LEF-LD system is designed with the capability to operate at greater distances and for use in elevators. The sub stations are available in either surface or flush mount styles. Any LEF, LAF-C/CA, or LDF master can be modified for Long Distance. This is a SINGLE MASTER SYSTEM ONLY.


IMPORTANT:

Only the IF-DA-LD and IE-JA-LD will function with these LD style master. Standard sub stations will not function. In addition, the IE-JA-LD and IF-DA-LD will not function with a master other than an "LEF, LAF or LDF -nLD" style.

WIRING DIAGRAMS:


Method A:

3 conductors homerun from master to each sub.

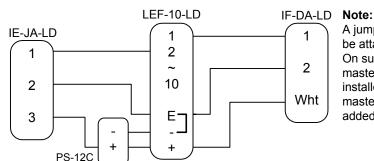

A jumper between E & - must be attached on the master. On surface/desk mount LEF masters, the jumper is factory installed. On LEF-C series masters, the jumper must be added.

Method B:

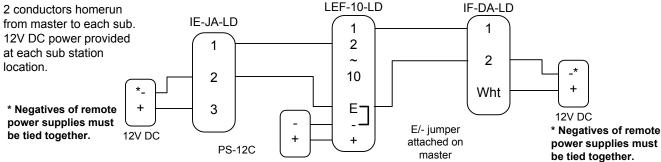

LEF Master Terminal Definitions:

1~10 Selective call/communication terminal for each call button

Ε Common communication

12V DC

Negative, common call signal

IF-DA-LD Sub Station:

Call-in and Communication

2 Common

White +12V DC (connect to + of PS-12C)


IE-JA-LD Sub Station:

Call-in and Communication


2 Common

+12V DC (connect to + of PS-12C)

IF-DA-LD Mounting:



IE-JA-LD Mounting:



Wiring Distance: 22 AWG = 2000'; 18 AWG = 4000'

Aiphone Communication Systems 1700 130th Ave. N.E. Bellevue, WA 98005 (425) 455-0510 FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT:

(800) 692-0200 **TOLL FREE FAX LINE:** (800) 832-3765 E-mail: tech-serv@aiphone.com

Only wiring concerning the LEF-LD is shown here. For complete wiring information, please see the standard instructions. LEF-LD Instr. 0503bk